 


DIGITAL PIANO USER MANUAL

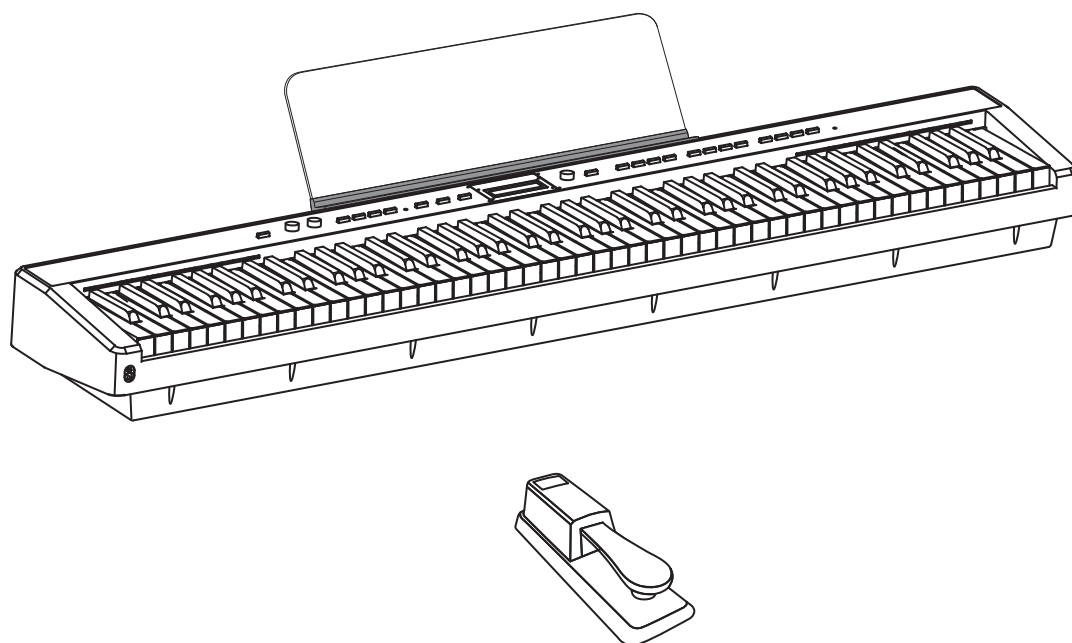

This product is subject to change without prior notice



FUNCTION INTRODUCTION

 
Thank you for choosing our digital piano. This product is elegant and exquisite. It is the perfect presentation of contemporary new electronic technology and acoustics.

- Before using the instrument, you must read this manual carefully.




5TH GENERATION FRENCH DREAM SOUND SOURCE

Its core uses the French sound source 5th generation chip, digital audio analog sampling, for your performance to bring a realistic listening experience.

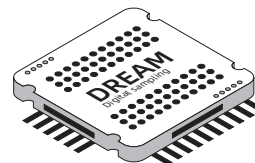

88 PROGRESSIVE HEAVY HAMMER KEYS

 88 key progressive lever step by step heavy hammer keyboard gives you a real touch like playing on a grand piano.

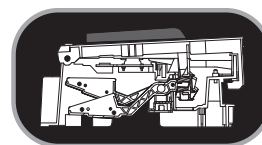

Dual Bluetooth

Contains Bluetooth MIDI and Bluetooth Audio . password: 8888

 
- Tone: 238 tone
- Rhythm: 200 rhythms
- Demo: 100 songs
- Volume adjustment: main volume / accompaniment volume
- Accompaniment: comprehensive chord / synchronization / prelude / insertion / epilogue
- Recording: recording / playing
- Adjustment: transpose + - / tempo + - / digital +-
- Metronome: 4 kinds
- Other functions: keyboard drum / dual tone / split / sound effect / touch
- Habit setting: save / call

REMARK!

- This product is an electro-acoustic instrument product. It is normal that there is a little current sound in the speaker or earphone after power-on.
Keep away from "radio, TV, antenna receiver, router, refrigerator, TV, motor and other RF electrical interference sources" during use.



TERMINAL DIAGRAM

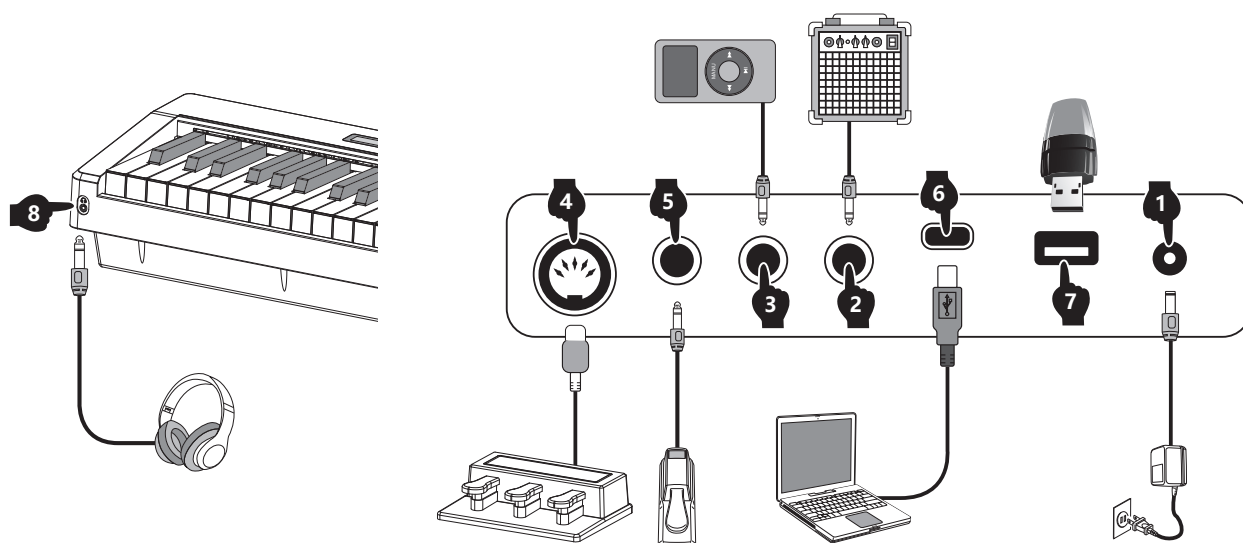

1 Power cord port

Connect the power cord as shown in the diagram, with one end plugged into a DC socket and the other end plugged into a 100-240V household power outlet (Figure 1)

2 By audio output port

The audio output jack can be connected to external active speakers and amplifier devices. (Figure 2)

3 Audio Input Port

The audio input jack can be connected to external audio sources for playback (such as MP3, linear audio signal input for mobile phones, etc.). (Figure 3)

4 Three pedal port

Connect the three pedals, and the sound control sequence for pressing the three pedals is: soft tone, trailing tone, and trailing tone. (Figure 4)

5 Yanyin pedal port

Connect the sustain pedal and press the pedal to control the effect of sound extension. (Figure 5)

6 USB MIDI port

The USB MIDI interface can be used to connect and interact with music devices with MIDI. By using pre installed music software on computers, tablets, and mobile phones, users can learn or play the keyboard for functions such as playing, composing, and storing. (Figure 6)

7 USB Flash drive port

 
Store MP3, WMA USB flash drives in audio formats such as MP4, WAV, FLAC, and ACC can be inserted for automatic playback. (Figure 7)

8 Earphone port

Connecting headphones can monitor the details of changes during performance and automatically cut off the built-in speakers, without disturbing others during performance. (Figure 8)



OPERATION GUIDE

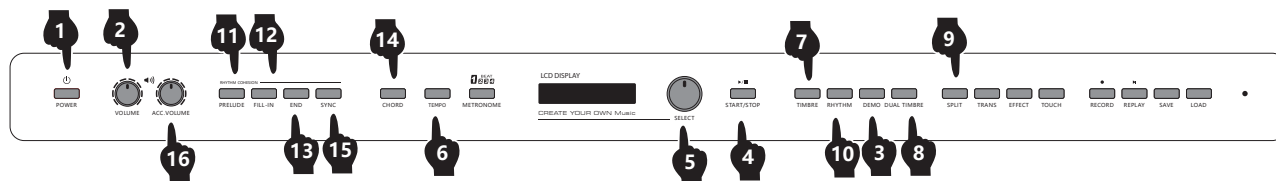

1 POWER ON/OFF

Press the "POWER" button, the indicator lights up, enters the open state, and press again to close. (Fig. 1)

- Processor chips of this product are complex, similar to computer systems. Sometimes they can not respond. Please turn off the power switch and then turn it on to work properly.

2 MASTER VOLUME

Turn the "VOLUME" knob to adjust the total volume to a satisfactory position. (Fig. 2)

3 DEMONSTRATION MUSIC PLAYING

1. Press the "DEMO" button to enter the music playing mode. (Fig. 3)
 2. Press the "START / STOP" button to start or stop the music playing. (Fig. 4)
 3. Turning the "Select" knob to select the music to be played, and the screen will display the code and name of the selected music. (Fig. 5)
 4. Press the "TEMPO" button and then rotate the "Select" knob to change the music playback speed. (Fig. 6)
- There are 100 songs in total. Please refer to the attached demo table for the name of the songs.

4 INSTRUMENT TIMBRE

SELECT INSTRUMENT TIMBRE:

1. Press the "TIMBRE" button to enter the instrument timbre selection mode. (Fig. 7)
 2. Turning the "Quick Select" knob to select the timbre of the instrument, and the selected timbre code and name will be displayed on the screen. (Fig. 5)
- there are 238 timbres in total. Please refer to the appendix tone table for the timbre name of the musical instrument.

SET DUAL TIMBRE:

 
1. In tone mode, first select a tone as the main instrument.
2. Press the "DUAL TIMBRE" button to start the dual tone mixing mode. (Fig. 8)
3. Turning the "Select" knob to select another instrument as the superimposed timbre. (Fig. 5)
4. Playing on the "KEYBOARD" can produce a mixed sound of two musical instruments.
5. Press the "DUAL TIMBRE" button again to exit the function.

SET KEYBOARD SPLIT:

1. In tone mode, first select one as the right keyboard instrument timbre.
2. Press the "SPLIT" button to enter the left and right keyboard instrument timbre segmentation mode. (Fig. 9)
3. Turning the "Select" knob to select another instrument as the timbre of the instrument on the left keyboard. (Fig. 5)
4. Play on the "KEYBOARD". At this time, the left and right sides of the keyboard emit different instrument sounds.
5. Press the "SPLIT" button again to exit the function.



OPERATION GUIDE

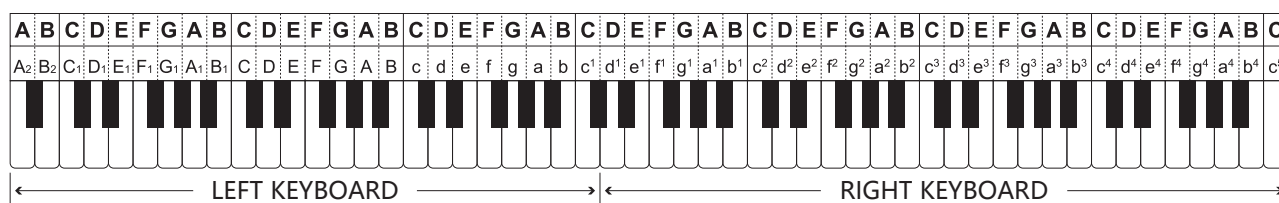

5 ACCOMPANIMENT

SELECT RHYTHM:

1. Press the "RHYTHM" button to enter the rhythm selection mode. (Fig. 10)
 2. Turning the "Select" knob to select the rhythm style, and the selected rhythm code and name will be displayed on the screen. (Fig. 5)
 3. Press the "START / STOP" button to start playing the selected rhythm. Press again to stop playing. (Fig. 4)
- there are 200 rhythms in total. Please refer to the rhythm table in the appendix for the rhythm name.

PRELUDE:

1. First select the rhythm to be played, and then press the "PRELUDE" button to enter the standby mode. (Fig. 11)
2. Press the "START / STOP" button to start playing the prelude of the selected rhythm, and then play the selected rhythm. (Fig. 4)

INSERT INTERLUDE:

In the process of rhythm playing, press the "FILL-IN" button to insert a transitional interlude for the rhythm being played. (Fig. 12)

EPILOGUE:

During rhythm playback, press the "END" button to insert an endplay for the rhythm being played. After the endplay is finished, the rhythm playback will stop. (Fig. 13)

CHORDS:

Press the "CHORD" button, the left keyboard will switch to the chord keyboard area (1-34 keys from the left). At this time, play the left keyboard, and automatically recognize and play the chord according to the single finger or multi finger fingering method. Press again to exit this function. (Fig. 14)

SYNCHRONOUS START:

 
1. First select the rhythm to be played, and then press the "SYNC" button to enter the rhythm synchronization playing state. (Fig. 15)
 2. Press the piano key in the "CHORD KEYBOARD AREA" to trigger the rhythm to play synchronously.
- if "CHORD" is on, the chord and the selected rhythm will be played synchronously.

RHYTHM PLAYBACK SPEED:

Press the "TEPMO" button and then rotate the "Select" knob to change the rhythm playback speed. (Fig. 6)


ACCOMPANIMENT VOLUME:

Turn the "ACC.VOL + -" knob to adjust the corresponding accompaniment volume. (Fig. 16)

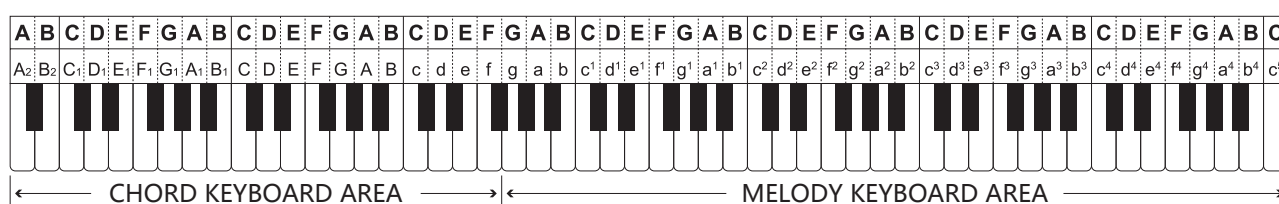



OPERATION GUIDE

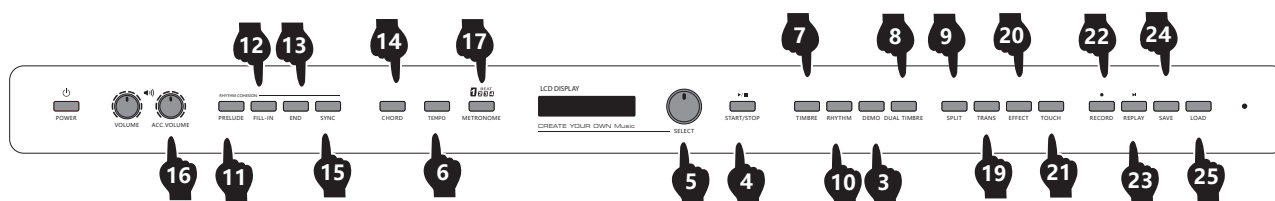 

6 METRONOME

1. Press the "metronome" button, the metronome function starts, and you can play the piano with the beat sound. (Fig. 17)
2. There are four types of metronomes, which can be switched by rotating the "SELECT" knob.
 - switching sequence: 1 / 4, 2 / 4, 3 / 4, 4 / 4, close, and cycle accordingly.
3. Press the "TEMPO" button and then rotate the "Select" knob to change the metronome playback speed. (Fig. 6)

8 KEYBOARD TRANS

- Press the "TRANS" button and then rotate the "Select" knob to adjust the keyboard pitch. This feature allows you to adjust the range of the entire keyboard by half a scale without changing the keyboard position. (Fig. 19)
- adjustment range: 12 semitones.

9 SOUND EFFECT

Press the "EFFECT" button to turn on reverberation. At this time, the sound of playing the piano has the sound wave reflection effect in the building. Press again to turn off this function. (Fig. 20)

10 KEYBOARD TOUCH

By default, the keyboard's touch sensitivity is turned on. When playing the keyboard, it will produce sound of corresponding volume according to the strength of your fingers, which facilitates the performance of music with different emotions. There are three options for this mode, namely "Soft", "Normal", and "Hard", which can be selected by continuously pressing the "TOUCH" button. Pressing the "TOUCH" button multiple times can disable this feature, and after disabling, the sound produced when playing the piano will reach its maximum volume (Fig. 21)

11 RECORD

1. Press the "RECORD" button, and the metronome sounds, entering the recording mode. (Fig. 22)
2. Play the piano for recording.
3. Press the "REPLAY" button to play the recorded music. (Fig. 23)
 - during recording, the timbre of the instrument can be changed for recording.

12 SAVE SETTINGS

1. Press the "SAVE" button to save the modified parameter setting, which is convenient for calling user-defined parameters. (Fig. 24)
 - parameters that can be saved: TIMBRE / RHYTHM / DEMO / TEMPO / TRANS / EFFECT.
2. Press the "LOAD" button to load the previously modified parameter settings. (Fig. 25)



APPENDIX

TIMBRE TABLE

PIANO		SYNTH LEAD	
000	Acoustic Grand Piano	080	Lead 1 (square)
001	Bright Acoustic Piano	081	Lead 2 (sawtooth)
002	Electric Grand Piano	082	Lead 3 (calliope lead)
003	Honky-tonk Piano	083	Lead 4 (chiff lead)
004	Electric Piano1	084	Lead 5 (charang)
005	Electric Piano2	085	Lead 6 (voice)
006	Harpischord	086	Lead 7 (fifths)
007	Clavichord	087	Lead 8 (bass+lead)
HAMMERED INSTRUMENT		SYNTH TIMBRE	
008	Celesta	088	Pad 1 (new age)
009	Glockenspiel	089	Pad 2 (warm)
010	Music box	090	Pad 3 (polysynth)
011	Vibraphone	091	Pad 4 (choir)
012	Marimba	092	Pad 5 (bowed)
013	Xylophone	093	Pad 6 (metallic)
014	Tubular Bells	094	Pad 7 (halo)
015	Dulcimer	095	Pad 8 (sweep)
ORGAN		SYNTH EFFECT	
016	Hammond Organ	096	FX 1 (rain)
017	Percussive Organ	097	FX 2 (soundtrack)
018	Rock Organ	098	FX 3 (crystal)
019	Church Organ	099	FX 4 (atmosphere)
020	Reed Organ	100	FX 5 (brightness)
021	Accordian	101	FX 6 (goblins)
022	Harmonica	102	FX 7 (echoes)
023	Tango Accordian	103	FX 8 (sci-fi)
GUITARS		FOLK INSTRUMENTS	
024	Acoustic Guitar (nylon)	104	Sitar
025	Acoustic Guitar (steel)	105	Banjo
026	Electric Guitar (jazz)	106	Shamisen
027	Electric Guitar (clean)	107	Koto
028	Electric Guitar (muted)	108	Kalimba
029	Overdriven Guitar	109	Bagpipe
030	Distortion Guitar	110	Fiddle
031	Guitar Harmonics	111	Shanai
BASS		PERCUSSION INSTRUMENT	
032	Acoustic Bass	112	Tinkle Bell
033	Electric Bass (finger)	113	Agogo
034	Electric Bass (pick)	114	Steel Drums
035	Fretless Bass	115	Woodblock
036	Slap Bass 1	116	Taiko Drum
037	Slap Bass 2	117	Melodic Tom
038	Synth Bass 1	118	Synth Drum
039	Synth Bass 2	119	Reverse Cymbal
STRING MUSIC		SOUND EFFECT	
040	Violin	120	Guitar Fret Noise
041	Viola	121	Breath Noise
042	Cello	122	Seashore
043	Contrabass	123	Bird Tweet
044	Tremolo Strings	124	Telephone Ring
045	Pizzicato Strings	125	Helicopter
046	Orchestral Harp	126	Applause
047	Timpani	127	Gunshot
ENSEMBLE		PIANO2	
048	String Ensemble 1	128	Piano w
049	String Ensemble 2	129	Piano d
050	Synth Strings 1	130	HonkyTonk w
051	Synth Strings 2	131	Detuned EP
052	Choir Aahs	132	60s E.Piano
053	Voice Oohs	133	Harpischord 2
054	Synth Voice	134	Clavichord 2
055	Orchestra Hit	HAMMERED INSTRUMENT 2	
BRASS		135	Celesta 2
056	Trumpet	136	Glockenspiel2
057	Trombone	137	Music Box 2
058	Tuba	138	Vibraphone 2
059	Muted Trumpet	139	Marimba 2
060	French Horn	140	Marimba 2
061	Brass Section	141	Xylophone 2
062	Synth Brass 1	142	Tubular-bell 2
063	Synth Brass 2	ORGAN 2	
REEDS		143	Detuned Or
064	Soprano Sax	144	60's Organ
065	Alto Sax	145	Bandoneon
066	Tenor Sax	GUITARS 2	
067	Baritone Sax	146	Ukulele
068	Oboe	147	Mandolin
069	English Horn	148	Hawaiian Gt
070	Bassoon	149	Chorus Gt
071	Clarinet	150	Funk Gt
BLOWPIPE		151	Feedback Gt
072	Piccolo	BASS & ELECTRIC TONE	
073	Flute	152	Synth 1
074	Recorder	153	Synth 2
075	Pan Flute	154	Synth 3
076	Bottle Blow	155	Synth 4
077	Shakuhachi	156	Synth 5
078	Whistle	157	Synth 6
079	Ocarina	158	Synth 7

STRING MUSIC 2	
159	Violin 2
160	Cello 2
161	Harp 2
162	Strings
ENSEMBLE 2	
163	Choir Aahs2
164	Voice doo 2
BRASS 2	
165	Trumpet 2
166	Trombone 2
167	MuteTrumpet 2
168	French Horn 2
169	Brass 2
REEDS 2	
170	Soprano Sax 2
171	Oboe 2
172	EnglishHorn 2
173	Clarinet 2
BLOWPIPE 2	
174	Piccolo 2
175	Flute 2
176	Pan Flute 2
177	Shakuhachi 2
SYNTH LEAD 2	
178	Square 2
179	Sine Wave
180	Vox Lead
SYNTH TIMBRE 2	
181	Space Voice
182	Syn Mallet
183	Echo Bell
184	Echo Pan
FOLK INSTRUMENTS 2	
185	Sitar 2
COMBAT 2	
186	Castanets
187	Concert BD
188	808 Tom
189	Electric Percussion
SOUND EFFECT 2	
190	Gt.CutNoise
191	String Slap
192	Fl.KeyClick
193	Thunder
194	Wind
195	Stream
196	Bubble
197	Dog
198	Creaking
199	Door
200	Burst Noise
201	Laughing
202	Screaming
203	Heart Beat
204	Footsteps
205	Explosion
FOLK MUSIC PERCUSSION	
206	Luo
207	Pai Gu
208	Qin
209	Bian Zhong
210	Yang Qin
Folk Music Plucked Strings	
211	Liu Qin
212	Pi Pa
213	Zhong Ruan
214	Da Ruan
215	Yue Qin
216	San Xian
217	Gu Zheng
218	Gu Qin
Folk music wind instrument II	
219	Shen
220	Na Zi
221	Bi Li
222	Guan Zi
223	Ba Wu
224	Di Zi
225	Hu Lu Si
226	Pai Xiao
227	South Xiao
228	Xiao
229	Kou Di
230	Xun
Folk music bowed instruments	
231	Gao Hu
232	Er Hu
233	Zhong Hu
234	Ma Tou Qin
235	Ban Hu
236	Jing Hu
237	Hu Ensemble

DEMO TABLE

000	FUNK
001	RIVER_OF_DREAM
002	DANCING QUEEN
003	DONNA_LEE
004	FORGET
005	CHOPIN:GRANDE VALSE BRILLANTE
006	ACROSS THE SEA
007	XAVER SCHARWENKA:POLISH DANCE Op.3 No.1
008	RED CHERRY AND WHITE APPLE BLOSSOM
009	COUNTRY_GARDEN
010	COURANTE
011	JUST DRUNK
012	CARRY ME BACK TO OLD VIGINNY
013	EARLY AUTUMN
014	TWIST VARIATION
015	DANSE NEGRE Op.58
016	PALM LEAF
017	D MAJOR TANGO
018	SYMPHONY NO.94 SURPRISE
019	KATYUSHA
020	DESAFINADO
021	BEETHOVEN_BAGATELLES
022	IN THE HALL OF THE MOUNTAIN KING
023	EXPLORING
024	PERLUDE III
025	GRAND MARCH
026	PARAPHRASE
027	DANGEROUS AREA
028	FUTURE
029	SUNSHINE BEACH
030	JUNE SAMBA
031	KENNYG:SONGBIRD
032	L'INVERNO IN F MINOR
033	WINE
034	BLUES
035	FEELING
036	TURKEY
037	ETUDE IN F SHARP MAJOR
038	FUNNY GENTLEMAN
039	I DO IT FOR YOU
040	BEETHOVEN PIANO SONTA No.30
041	CARMEN
042	AMERICAN PATROL
043	MEDELSSOHN:RONDO IN D MAJOR
044	AURORA OF CITY
045	WISH U CHRISTMAS
046	NO STOPPING GALOP
047	LAST SUMMER
048	JAZZ
049	RHYTHM OF THE RAIN
050	TWINKLE TWINKLE VARIATION
051	ATLANTIS
052	FLYING TRAPEZE
053	TROIS ECOSSES Op.72,No.3-5
054	ALLEGRO CON BRIO
055	LEMON TREE
056	ARABESQUE
057	CHILDHOOD
058	JUST THE TWO OF US
059	SEE SHORE
060	ALL KIND OF MY EVERYTHING
061	NOCTURNE Op.9 No2
062	SOMETHING IN THE AIR
063	COMFORT
064	LET IT SNOW
065	BINGO
066	LIEBESTRAUM
067	PERFECT HAPPINESS
068	TOCCATA
069	LA BAMBA
070	RANDO CAPRICCIO
071	SCHERZO
072	LA CAMPANELLA
073	LOCKOUT
074	ROMANCE DE AMOR
075	BARCAROLE
076	CHOPIN:ETUDE IN C MINOR Op.10 No.12
077	DANCE OF YOUTH
078	GRIEG AIR
079	THE HOME COMING
080	LAZY_BIRD
081	RED RIVER VALLEY
082	ENTERTAINMENT
083	CHOPIN:MAZURKA Op.39 No.10
084	THE BEAR IN THE FOREST
085	PRIMITIVE DANCE STEPS
086	MODERN GRAY
087	MOONLIGHT
088	LOVE FOREVER
089	JARDIN SECRET
090	BALL
091	COUNTRY
092	SOMALILAND
093	MAPLE LEAF RAG
094	BRAHMS_CONCERTO
095	WALTZ IN D FLAT,OP.64 No.1
096	COBWEB
097	HAPPY BOSSA
098	SILENT NIGHT
099	CURIOUS STORY



APPENDIX

BLUES

000	6.8BLUES
001	4.4BLUES
002	5.4BEAT1
003	5.4BEAT2
004	BOOGIEWOOGIE
005	soulshuffle
006	RAGTIME1
007	RAGTIME2
008	SHUFFLE1
009	SHUFFLE2
010	SHUFFLE3
011	SHUFFLE4
012	BLUES1
013	BLUES2
014	BLUES3
015	BLUES4
016	TWIST1
017	TWIST2
018	TWIST3
019	TWIST4
020	GOSPEL1
021	GOSPEL2
022	GOSPEL3
023	R&B
024	SWING1
025	SWING2
026	BLUEBOOGIE

JAZZ

027	JAZZ1
028	JAZZ2
029	JAZZ3
030	JAZZ4
031	JAZZ5
032	JAZZBALLAD
033	JAZZWALTZ
034	JAZZBAND1
035	JAZZBAND2
036	JAZZBAND3
037	SWINGJAZZ
038	COOLJAZZ
039	DIXIELAND1
040	DIXIELAND2
041	FUSION
042	LANGE
043	SOUL1
044	SOUL2
045	SOUL3

FOX TROT

046	FOXTROT1
047	FOXTROT2
048	FOXTROT3
049	FOXTROT4
050	FOXTROT5
051	FOXTROT6
052	FOXTROT7
053	FOXTROT8
054	FOXTROT9

COUNTRY

055	COUNTRY1
056	COUNTRY2
057	COUNTRY3
058	COUNTRY4
059	COUNTRY5
060	COUNTRY6
061	COUNTRY7
062	COUNTRY8
063	COUNTRY9
064	COUNTRY10
065	COUNTRY11
066	COUNTRY12
067	COUNTRY13
068	COUNTRY14
069	COUNTRY15
070	COUNTRY16
071	COUNTRYPOP
072	COUNTRYSHUFFLE1
073	COUNTRYSHUFFLE2
074	COUNTRYSWING

LATIN

075	LATIN1
076	LATIN2
077	LATIN3
078	LATIN4
079	LATIN5
080	LATIN6
081	TANGO1
082	TANGO2
083	RUMBA1
084	RUMBA2
085	RUMBA3
086	CHACHA1
087	CHACHA2
088	CHACHA3
089	CHACHA4
090	CHACHA5
091	CHACHA6

BOSSANOVA

092	BOSSANOVA1
093	BOSSANOVA2
094	BOSSANOVA3
095	SAMBA1
096	SAMBA2
097	SAMBA3
098	MAMBO1
099	MAMBO2
100	MAMBO3
101	REGGAE1
102	REGGAE2
103	SALSA1
104	SALSA2
105	MODERN1
106	MODERN2

DANCE

107	DANCE1
108	DANCE2
109	DANCE3
110	DANCE4
111	DANCE5
112	DANCE6
113	DANCE7
114	70DISCO1
115	70DISCO2
116	DISCO1
117	DISCO2
118	DISCO3
119	VAPERWAVE

FUNK

120	FUNK1
121	FUNK2
122	FUNK3
123	FUNK4
124	FUNK5
125	FUNK6
126	FUNK7

R&B

127	R&B1
128	R&B2
129	R&B3
130	R&B4
131	R&B5
132	R&B6

POP

133	16BEAT1
134	16BEAT2
135	16BEAT3
136	16BEAT4
137	16BEAT5
138	16BEAT6
139	16BEAT7
140	16BEAT8
141	POP1
142	POP2
143	POP3
144	POP4
145	POP5
146	POP6
147	POP7
148	POP8
149	VINTAGE1
150	VINTAGE2
151	FOLKPOP
152	NEWAGE
153	POPBOSA1
154	POPBOSA2
155	POPRAP
156	POPSAMBA

ROCK

157	8BEAT1
158	8BEAT2
159	8BEAT3
160	8BEAT4
161	8BEAT5
162	8BEAT6
163	8BEAT7
164	8BEAT8
165	8BEAT9
166	8BEATROCK1
167	8BEATROCK2
168	Rock1
169	Rock2
170	Rock3
171	Rock4
172	Rock5
173	INDIEROCK1
174	INDIEROCK2
175	60thRock
176	GlamMetal1
177	GlamMetal2
178	GlamMetal3
179	PunkRock1
180	PunkRock2
181	PunkRock3
182	PunkRock4
183	PunkRock5
184	JIVEROCK
185	ROCKSHUFFLE
186	ROCK'N'ROLL1
187	ROCK'N'ROLL2

ORIENTAL

188	BEGUINE1
189	BEGUINE2
190	CARIBBEAN
191	BOLERO
192	DANGDUT
193	CHINA
194	JIANGNAN
195	XIZANG
196	YUNNAN
197	HAWAII
198	GUARACHA
199	CHARLESTON



PRODUCT MAINTENANCE

Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing the failure.

1 AVOID HEATING, DAMPNESS OR DIRECT SUNLIGHT

Do not over expose the product to direct sunlight, or place it near air conditioning or extremely hot place.

2 DO NOT USE NEAR THE TV OR RADIO

This product may cause video or audio interference to the reception of TV and radio. If this happens, the product should be removed from the TV or radio.

3 NO DILUENTS OR SIMILAR CHEMICALS SHOULD BE USED FOR CLEANING

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

4 DO NOT SHAKE, AVOID COLLISION

 
When moving, the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.



SAFETY PRECAUTIONS

POWER SUPPLY

This product can be powered by standard indoor wall socket. Please only use the power cord equipped with this product. Be sure to turn off the power when not in use temporarily. When not in use for a long time, please unplug the power cord and keep it properly.

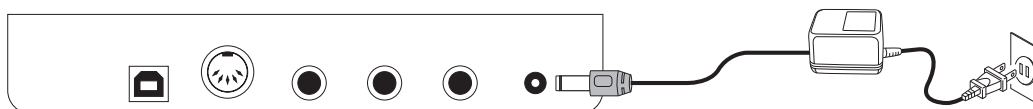

SIGN

To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meanings are as follows:



WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.



BE CAREFUL

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

EXAMPLE OF LOGO



This triangle sign ($\triangle$) indicates what users should pay attention to. (The left example is careful shocks)



A circular sign ($\odot$) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (The example on the left is no disassembly)



The round black bottom sign ($\bullet$) indicates what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed. (The example on the left is that the power plug must be pulled out of the socket)



SAFETY PRECAUTIONS



WARNING

Smoke, odor, overheating

When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually. In case of the above situation, the following operations should be performed immediately:

1. Turn off the power supply.
2. Pull the plug out of the power outlet.
3. Contact your dealer.

Power cord

1. The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- The special power cord designated for this product must be used.
- The AC power supply with output voltage within the rated voltage range for household use must be used.
- Do not overload power sockets and extension lines.



2. The improper treatment of power line will lead to its damage or breakage, which will cause fire and electric shock hazards. The following precautions must be observed:

- Do not place or heat heavy objects on power lines.
- Do not attempt to alter or bend the power cord too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, please replace the same type of power cord.



3. Do not touch the power cord and plug with wet hands, otherwise there is a danger of electric shock.



4. Please use the power cord where the water will not splash. Water is in danger of causing fire and electric shock.



5. Never place vases or any other container containing water on this product. Water is dangerous of causing fire and electric shock.



6. Do not allow minors to unplug and touch power lines or connection boards. Minors have no common sense of electricity safety, which may cause electric shock.



BE CAREFUL

The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- Never put the power cord near the oven or other heat source.
- Do not pull the cable when pulling out of the power socket. The main body of the plug must be grasped.
- The power cord plug must be inserted in the socket to the end.
- Make sure the power supply is off before connecting or disconnecting it.
- When thunderstorms occur or before traveling or other long-term departure, disconnect the power cord from the wall outlet.
- At least once a year, remove the power cord from the wall outlet and clean the dust accumulated around the plug.



Do not burn this product

Do not put this product in the fire, otherwise it will lead to product combustion and explosion of internal electronic components, which will cause fire and personnel injury.



Water and foreign bodies

Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.



Disassembly and transformation

Do not disassemble or transform the product in any way, otherwise there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your distributor.





SAFETY PRECAUTIONS

Falling or colliding

If the product falls or is damaged by strong impact, it will be in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, you need to unplug it from the wall outlet.
3. Contact your distributor.



Plastic bag

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young children should pay special attention to it.



Keep a distance from the product and the bracket

Climbing the bracket is dangerous of overturning or damage. Families with young children should pay special attention to it.



Put

Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall down, which will lead to the risk of injury.



Product Mobility

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires. Otherwise, it will lead to damage of power or connection wires, resulting in fire and electric shock.



clean

Before cleaning this product, you must unplug the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.



Jack

The socket of this product can only be connected to the designated equipment and devices. Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.



Location selection

It should be avoided to place the product in the following places, otherwise there is a risk of fire and electric shock.



- High temperature or dusty places.
- Kitchen or other places with lampblack.
- Where the product is exposed to direct sunlight, or any other place where the product will produce high temperature.

Volume

Don't play music long and loud. Pay special attention when using headphones. Excessive volume can damage your hearing.



Heavy

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing the product to overturn or drop objects on it, which will lead to the risk of injury.



Correct assembly of scaffolds

The incorrect assembly of the bracket may overturn, causing the product to fall off and posing a risk of injury to personnel. Therefore, it must be assembled according to the instructions in the attached installation guide to ensure that the product is properly mounted on its bracket.





WARRANTY CARD

Warranty rules

1. Faults arising from normal use of this product can be guaranteed free of charge for _____ days from the date of purchase.
2. Failure occurs during the warranty period. This warranty card and shopping ticket must be presented during maintenance.
3. In the following cases, no free warranty will be provided:
 - Damage caused by improper use by users.
 - Fault damage caused by irresistible factors such as fire, flood, earthquake and lightning strike.
 - Failure caused by unauthorized self-disassembly.
4. After exceeding the warranty period, the company is responsible for maintenance, but it needs to charge a cost fee.

Seller: _____

Address: _____

Telephone: _____

Maintenance record

Date	Maintenance record	Repairman



