

# LX708 LX706 LX705

Roland Digital Piano

**Owner's Manual**

English

Deutsch

Français

Italiano

Español

Português

Nederlands

# Access the “Video Manual”


Watch the quick start video.



If your device can't read the QR code, access the following location.

<http://roland.cm/lx700>

\* If subtitles are not shown, press the subtitle button located in the lower right of the screen. To see English subtitles, choose “English” from the settings button.

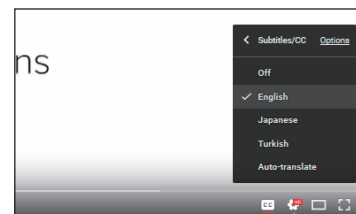

subtitle button settings button

## Provision of Bluetooth functionality

Please be aware that depending on the country in which you purchased the piano, **Bluetooth** functionality might not be included.

If Bluetooth functionality is included

The Bluetooth logo appears when you turn on the power.



## Main Specifications

Roland LX708, LX706, LX705: Digital Piano

	LX708	LX706	LX705
<b>Sound Generator</b>	Piano Sound: Pure Acoustic Piano Modeling		
<b>Keyboard</b>	Hybrid Grand Keyboard: Wood and Plastic Hybrid Structure, with Escapement, Ebony/Ivory Feel and haptic feedback (88 keys)	Hybrid Grand Keyboard: Wood and Plastic Hybrid Structure, with Escapement and Ebony/Ivory Feel (88 keys)	PHA-50 Keyboard: Wood and Plastic Hybrid Structure, with Escapement and Ebony/Ivory Feel (88 keys)
<b>Bluetooth</b>	Audio: Bluetooth Ver 3.0 (Supports SCMS-T content protection) MIDI: Bluetooth Ver 4.0		
<b>Power Supply</b>	AC Adaptor		
<b>Power Consumption</b>	24 W (22–70 W)	17 W (16–55 W)	14W (13–35 W)
<b>Dimensions (including piano stand)</b>	With top lid closed: 1395 (W) x 491 (D) x 1180 (H) mm 54-15/16 (W) x 19-3/8 (D) x 46-1/2 (H) inches With top lid opened: 1395 (W) x 502 (D) x 1253 (H) mm 55-15/16 (W) x 19-13/16 (D) x 49-3/8 (H) inches	1383 (W) x 493 (D) x 1118 (H) mm 54-1/2 (W) x 19-7/16 (D) x 44-1/16 (H) inches	1383 (W) x 468 (D) x 1038 (H) mm 54-1/2 (W) x 18-7/16 (D) x 40-7/8 (H) inches
<b>Weight (including piano stand)</b>	Polished Ebony/White: 110.5 kg/243 lbs 10 oz Others: 109.0 kg/240 lbs 5 oz	Polished Ebony: 98.0 kg/216 lbs 1 oz Others: 96.5 kg/212 lbs 12 oz	Polished Ebony: 76.1 kg/167 lbs 13 oz Others: 74.6 kg/164 lbs 8 oz
<b>Accessories</b>	Owner's Manual, Leaflet "USING THE UNIT SAFELY," The collection of scores "Roland Piano Masterpieces," AC Adaptor, Power Cord, Headphone Hook		
<b>Options</b>	Headphones		

\* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

# LX708 LX706 LX705

Roland Digital Piano




## Owner's Manual

### Contents

<b>Panel Descriptions</b> .....	4	Initializing the Memory (Format Media) .....	23
<b>Before You Play</b> .....	6	Restoring the Factory Settings (Factory Reset) .....	23
Opening the Keyboard Cover (Turning the Power On)....	6	<b>Making Various Settings (Function Mode)</b> .....	24
Using the Music Rest.....	6	Basic Settings in Function Mode .....	24
Opening/Closing the Top Lid .....	6	Turning the Bluetooth Function On/Off (Bluetooth On/Off).....	24
Adjusting the Overall Volume .....	6	Adjusting the Volume of Bluetooth Audio (Input/Bluetooth Vol.) .....	24
Using the Headphones .....	7	Dividing the Keyboard for Two People (Twin Piano).....	24
Using the Pedals.....	7	Transposing the Pitch of the Song Playback (Song Transpose).....	24
Basic Operations of Functions .....	7	Adjusting the Song (SMF) Volume (Song Volume SMF) .....	24
Turning the Power Off .....	7	Adjusting the Song (Audio) Volume (Song Volume Audio).....	25
<b>Performing</b> .....	8	Adjusting the Volume of an Audio Playback Device (Input/Bluetooth Vol.) .....	25
Playing Various Tones .....	8	Specifying the Keyboard Tone for Song (SMF) Playback (SMF Play Mode) .....	25
Selecting a Tone .....	8	Changing How the Pedal Effects Are Applied (Damper Pedal Part) .....	25
Saving Your Performance Settings (Registration) ...	8	Changing How the Pedals Work (Center Pedal) .....	26
Playing Different Tones with the Left and Right Hand (Split Play) .....	10	Changing the Effect of the Pedal (Left Pedal) .....	26
Layering Two Tones (Dual Play).....	10	Preventing Doubled Notes When Connected to a Sequencer (Local Control) .....	26
Practicing with the Metronome.....	11	MIDI Transmit Channel Settings (MIDI Transmit Ch.) .....	26
Transposing Your Performance .....	11	Changing the Language Displayed in the Screen (Language) .....	26
<b>Listening to Songs</b> .....	12	Adjusting the Brightness of the Display (Display Contrast) .....	26
Playing Back a Song .....	12	Specifying the Time Until the Operating Panel Is Dimmed (Screen Saver).....	27
<b>Recording Your Performance</b> .....	13	Specifying a Maximum Volume (Volume Limit) .....	27
Recording Your Keyboard Performance .....	13	Switching the Tonal Character of the Sound from the Speaker (Speaker Setting).....	27
Getting Ready to Record.....	13	Adjusting the Haptic Key Vibration (Haptic Key Vibration).....	27
Starting/Stopping Recording .....	13	Turning Off the Power When You Close the Keyboard Cover (Power Off by the Lid).....	27
Listening to the Recorded Performance.....	13	Making the Power Automatically Turn off After a Time (Auto Off) .....	27
Deleting a Saved Song .....	13	Saving Settings Automatically (Auto Memory Backup) .....	27
Advanced Recording Methods .....	14	Settings Saved Even If the Power Is Turned Off.....	28
Recording Your Performance One Hand at a Time ..	14	<b>Troubleshooting</b> .....	29
Overdubbing a Recorded Performance .....	15	<b>Error Messages</b> .....	31
Recording Audio to USB Flash Drive .....	15	<b>USING THE UNIT SAFELY</b> .....	32
<b>Creating Your Own Piano Tone (Piano Designer)</b> .....	16	<b>IMPORTANT NOTES</b> .....	33
Adjusting the Sound of the Overall Piano .....	16		
Editing the Grand Piano Tone.....	18		
<b>Connecting the Piano and a Mobile Device via Bluetooth</b> 19			
Here's What You Can Do.....	19		
Setting Procedure .....	19		
Play Music Through the Piano's Speakers.....	19		
Using the Piano with an App.....	20		
If You Can't Connect via Bluetooth for Use with an App... 21			
<b>Convenient Functions</b> .....	22		
Loading/Saving Piano Setups .....	22		
Saving Piano Settings (Piano Setup Export) .....	22		
Loading Piano Settings (Piano Setup Import).....	22		

Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (leaflet "USING THE UNIT SAFELY" and Owner's Manual (p. 32, p. 33)). After reading, keep the document(s) including those sections where it will be available for immediate reference.

# Panel Descriptions

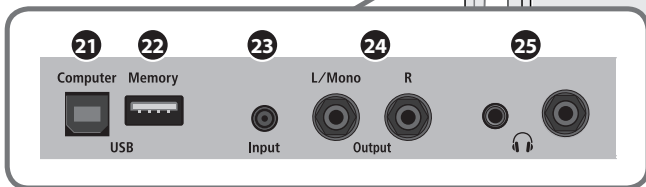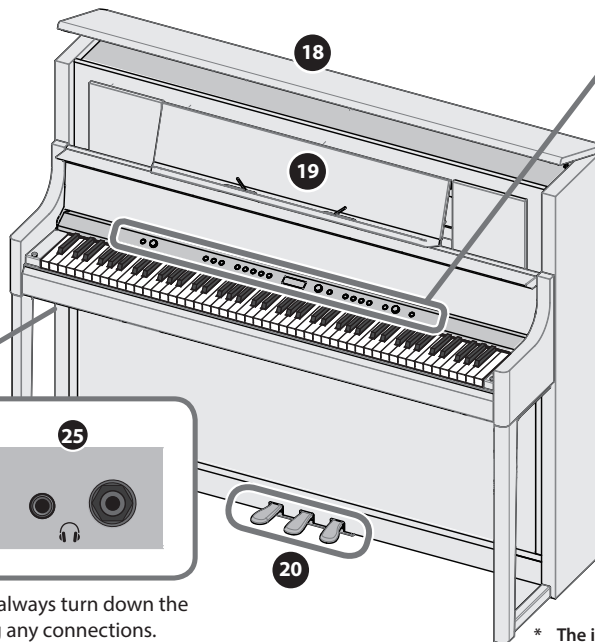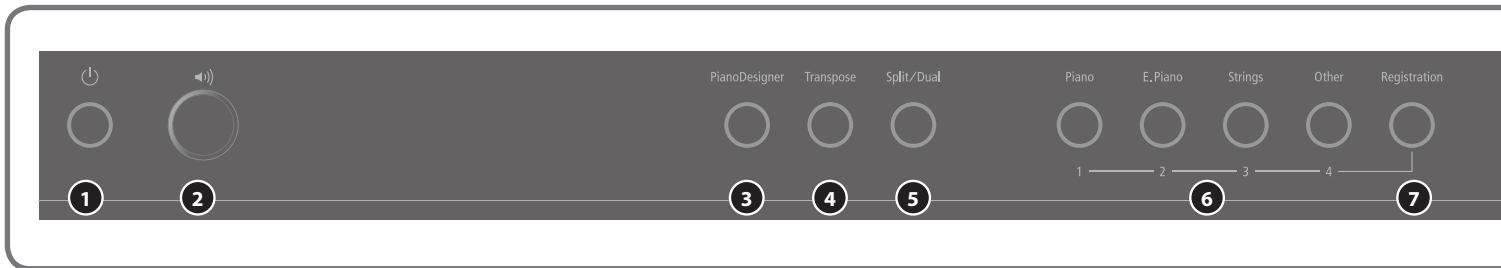

\* To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

\* The illustration shows the LX708.

## 1 [⏻] (Power) button

Turns the power on/off. (p. 6)

\* This piano also lets you turn the power on/off by opening or closing the keyboard cover.

## 2 [🔊] (Volume) knob

Adjusts the volume of the entire piano.

This adjusts the volume for playing the piano or playing back the songs. If headphones are connected, it adjusts the volume of the headphones. (p. 6, p. 7)

## 3 [Piano Designer] button

Adjusts various elements of the piano's sound, allowing you to customize the sound to your preference. (p. 16)

## 4 [Transpose] button

The keyboard can be transposed in semitone steps.

When accompanying a vocal, or when performing as a singer-instrumentalist, you can transpose the pitch to match the singer's pitch range without changing the fingering of your keyboard playing (p. 11).

## 5 [Split/Dual] button

Lets you play different tones in the left- and right-hand areas of the keyboard (Split Play), or layer two tones together on the keyboard (Dual Play). (p. 10)

## 6 Tone buttons

Select the sound that's played by the keyboard. (p. 8)

## 7 [Registration] button

Lets you register your favorite performance settings so that you can easily recall those settings while you perform.

## 8 Display

This shows information such as the tone name, song name, tempo, and time signature.

## 9 [↕] (select/confirm) knob

Changes or confirms an item or value shown in the screen. (p. 7)

Turn knob	Change an item or a value
Press knob	Confirm

## 10 [↶] (back) button

Returns to the previous screen, or exits the current screen. (p. 7)

## 11 [📄] (song) button

Selects the built-in song or recorded performance that will be played back. (p. 12)

## 12 [▶/■] (play/stop) button

Plays/stops the song playback, or start/stops recording. (p. 12, p. 13)

## 13 [●] (recording) button


Records the performance that you play. (p. 13)

## 14 [Part] button

Lets you select the performance part (right-hand, left-hand, accompaniment) that will play back. This also lets you record parts separately. (p. 12, p. 14)

## 15 [🔔] (metronome) button

Turns the metronome on/off. (p. 11)

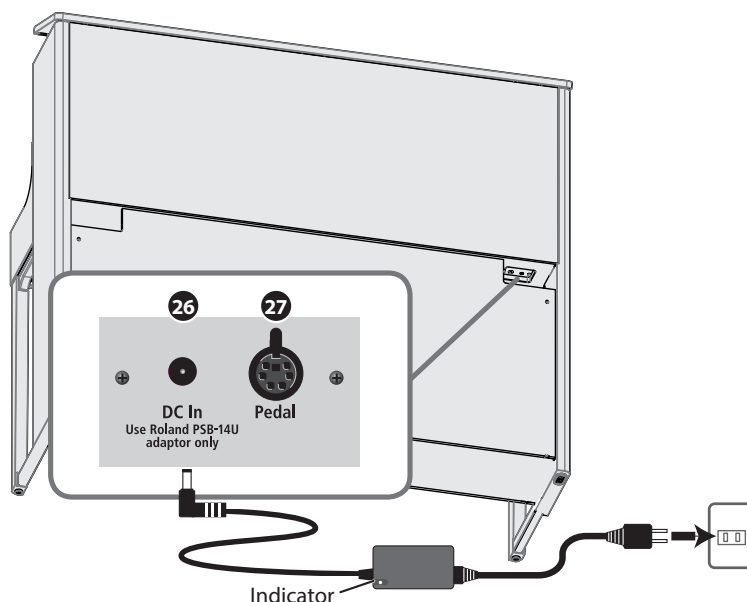

## 16 [Tempo] knob

Changes the tempo of the metronome or song. Turning the knob toward the right makes the tempo faster, and turning it toward the left makes the tempo slower. Long-press the knob to return to the default value.

- Changing the metronome tempo (p. 11)
- Changing the song tempo (p. 12)

## 17 [⚙️] (settings) button

Lets you access function mode, where you can change various settings. (p. 24)

## 18 Top Lid **LX708 only**

Opening the top lid allows the sound to be more clearly defined; closing it produces a softer sound. (p. 6)

## 19 Music Rest

Place printed music here. (p. 6)

## 20 Pedal

By pressing the pedals, you can apply effects to the sound of the piano. You can also assign a variety of functions to the pedals.

- Apply effects to the sound of the piano (p. 7)
- Assign functions to the pedals (p. 25)

## 21 USB Computer port

Here you can connect your computer via a USB cable (sold separately). If your computer is connected, performance data can be transferred between the piano and sequencer software (sold separately) on your computer, allowing you to produce or edit music.

## 22 USB Memory port

Here you can connect a USB flash drive. You can use it to record your piano performance as audio, or use the piano to play back music data (WAVE files, MIDI files, MP3 files) from the USB flash drive. (p. 15, p. 12)

## 23 Input jack

Here you can connect a stereo mini-plug cable for connecting your iPod or other audio player. The sound that's played back from your audio player can be heard from the piano's speakers. You can also play the piano along with the playback audio.

## 24 Output jacks (L/Mono, R)

Here you can connect external speakers via cables that are equipped with mono 1/4" plugs (commercially available). Since this lets the sound of the piano be louder, it is useful when you are playing in front of a large number of people.

## 25 Phones jacks

Here you can connect stereo headphones. This piano has two headphone jacks, two people can also use headphones simultaneously. (p. 7)

## 26 DC In jack

Connect the included AC adaptor here.

## 27 Pedal jack

Connect the pedal cord here.

# Before You Play

## Opening the Keyboard Cover (Turning the Power On)


This piano lets you turn the power on/off simply by opening or closing the keyboard cover.

- \* You can also leave the keyboard cover open and turn the power on/off by pressing the [⏻] button.
- \* You might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.
- \* If external speakers are connected to the piano, minimize the volume of your external devices before opening the keyboard cover.

### 1. Open the keyboard cover.

**LX708**

To open the keyboard cover, use both hands to lift it.

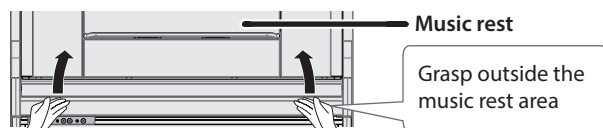

#### NOTE

When raising the keyboard cover, grasp it outside the area of the music rest. If you grasp the center of the keyboard cover when opening it, your hand might be pinched between it and the music rest.

**LX706 / LX705**

To open the keyboard cover, use both hands to lift it lightly, and slide it away from yourself.



- \* When opening or closing the keyboard cover, take care not to pinch your fingers between the moving part and the body of the unit. Pay special attention to this when using the unit where children are present.

## Using the keyboard cover to conceal the panel (Classic Position)

**LX706 / LX705**

If you raise the keyboard cover slowly, it stops at a position that hides the buttons and the display. If you use the cover to hide the operation panel, you'll be able to play as though you were playing an acoustic piano. When you push the cover further inward and up, it stops in a position where the operation panel is visible.



### Concerning the Auto Off function


The power to this unit will be turned off automatically after a predetermined amount of time has passed since it was last used for playing music, or its buttons or controls were operated (Auto Off function).

If you do not want the power to be turned off automatically, disengage the Auto Off function (p. 27).


- Any settings that you are in the process of editing will be lost when the power is turned off. If you have any settings that you want to keep, you should save them beforehand (p. 28).
- To restore power, turn the power on again.

## Using the Music Rest

### 1. Slowly pull the music rest toward yourself.




### 2. Raise the support located on the back of the music rest, and place it on the base.

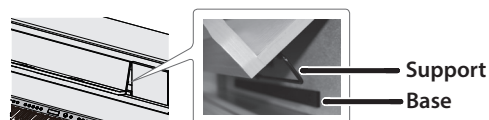

### 3. Raise the page retainers.

You can use these to keep the pages of your printed music in place. If not using them, leave them folded down.

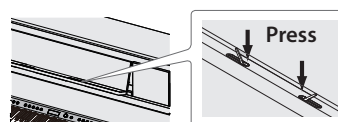


- \* When pulling out or returning the music rest, take care not to pinch your fingers between the moving part and the body of the unit. Pay special attention to this when using the unit where children are present.

## Opening/Closing the Top Lid

**LX708 only**

Opening the top lid allows the sound to be more clearly defined; closing it produces a softer sound.



### 1. Use both hands to lift up the top lid.

### 2. To close the top lid, use both hands to lift it up, and then slowly lower it.

- \* When opening or closing the top lid, take care not to pinch your fingers between the moving part and the body of the unit. Pay special attention to this when using the unit where children are present.
- \* Do not force the top lid backward; doing so will damage it.

## Adjusting the Overall Volume

Turn the [◀] knob to adjust the volume. The speaker volume and headphone volume can be set separately.



Turn the [◀] knob

Turning the knob toward the right increases the volume, and turning the knob to the left decreases the volume.

Press the [▶] knob

The screen shows the current volume setting.

## Using the Headphones

Use headphones if you want to perform without the sound being heard nearby. This piano has two headphone jacks, two people can also use headphones simultaneously.


### 1. Connect your headphones to the headphone jack.

When you connect headphones, sound is no longer heard from the piano's speakers.

### 2. Use the [◀] knob to adjust the volume of the headphones.

#### MEMO


Whenever you are not using the headphones, you can hang them on the headphone hook.

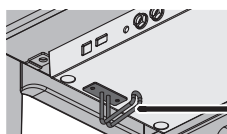

Headphone hook

## Using the Pedals

By pressing the pedals, you can apply effects to the sound of the piano.

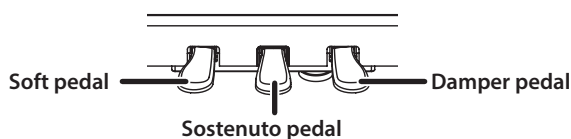

<b>Damper pedal (right)</b>	Use this pedal to sustain the sound. While this pedal is held down, notes will be sustained for an extended time even if you release your fingers from the keyboard. The resonance of the sound is affected by how deeply you press the pedal.
<b>Sostenuto pedal (center)</b>	The notes you are pressing when this pedal is depressed will be sustained.
<b>Soft pedal (left)</b>	This pedal is used to make the sound softer. Playing with the soft pedal depressed produces a sound that is not as strong as when otherwise played with the equivalent strength. The softness of the tone can be varied subtly by the depth to which you press the pedal.

\* When operating the pedal, take care not to pinch your fingers between the moving part and the body of the unit. Pay special attention to this when using the unit where children are present.

#### NOTE

Under the pedals there is an adjuster for securing the pedals. As you use the piano, the adjuster might creep upward, allowing the pedals to wobble when you step on them. If this occurs, turn the adjuster to lower it into firm contact with the floor. In particular if the piano is placed on carpet, you should lower the adjuster so that it firmly presses down on the floor.



Adjuster

## Basic Operations of Functions

To operate the functions of this piano, you use the [↵] (select/confirm) knob and the [⏪] (back) button.



<b>Change an on-screen item or value</b>	Turn the [↵] knob
<b>Confirm</b>	Press the [↵] knob
<b>Return to the previous screen / Exit the current screen</b>	Press the [⏪] knob
<b>Return to the default value</b>	Long-press the [↵] knob

## Turning the Power Off

### 1. Long-press the [⏻] button.

\* This piano lets you turn off the power simply by closing the keyboard cover.

#### LX708

To close the keyboard cover, use both hands to gently lower it.

#### LX706 / LX705

To close the keyboard cover, pull it gently toward yourself, and lower it softly after it has been fully extended.

\* Never disconnect the power cord 10 seconds after turning the power off. Malfunctions might occur if you disconnect the power cord while the system is still processing.

#### NOTE

Take care that foreign objects, such as sheet music or other papers, do not enter the piano through openings in the keyboard cover. Also, do not open the cover while papers are placed on the cover. Doing so might make the papers impossible to remove, causing malfunctions.



## Playing Various Tones

### Selecting a Tone

In addition to piano sounds, the piano lets you enjoy performing with many other sounds. There are four groups of tones; each tone button selects a group.

➔ Refer to the "Tone List" at the end of this manual.

#### Tone groups

Button	Explanation
[Piano] button	Grand piano tones
[E. Piano] button	Electric piano tones
[Strings] button	The tones of string instruments such as violins, as well as other instruments used in orchestras
[Other] button	Selects a variety of tones such as organ or accompaniment sounds. * If you've selected an organ sound that provides a rotary effect which simulates the sound of rotating speakers, pressing the [Other] button will switch the speed of the rotary effect
[Registration] button	Performance settings that you registered

#### 1. Press a tone button (e.g., [Piano]).

The tone group is selected. The name of the currently selected tone is shown.



#### 2. Turn the [↓] knob.

You can select other tones in the tone group.

#### Selecting tones from the [Other] button




Turn the [↓] knob	Selects the next tone. When you reach the last tone in the category, tones from the next category are selected.
Press the [↓] knob	Selects the tone category. You can turn the [↓] knob to change to another category.

## Saving Your Performance Settings (Registration)

Lets you register your favorite performance settings so that you can easily recall those settings while you perform.

Such settings are called a "Registration." You can save a total of 36 registrations, 9 each in buttons [1]–[4]. These 36 registrations are collectively called a "Registration set."

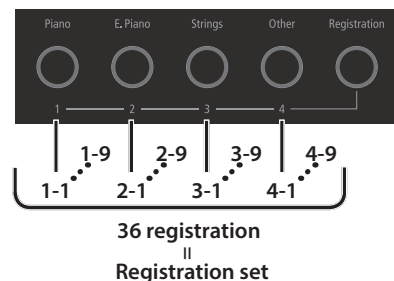

### Settings that are saved in a registration

Setting	Page
The selected tone (including Split or Dual tones)	p. 8, p. 10
Ambience	p. 16
Rotary Speed	p. 8
Key Touch	p. 16
Transpose	p. 11
Split on/off	p. 10
Split point	p. 10
Left Shift	p. 10
Right Shift	p. 10
Dual on/off	p. 10
Tone 1 Shift	p. 10
Tone 2 Shift	p. 10
Balance (Split, Dual)	p. 10
Twin Piano on/off	p. 24
Twin Piano Mode	p. 24
Damper Pedal Part	p. 25
Center Pedal	p. 26
Left Pedal	p. 26
MIDI Transmit Ch.	p. 26

### Recalling and editing a registration

#### 1. Press the [Registration] button.

#### 2. Press a number button ([1] to [4]) to choose the location where the desired registration is saved.

#### 3. Turn the [↓] knob to select the registration variation.

The selected registration is recalled.

#### MEMO

You can also use a pedal to recall registrations (p. 26).

#### 4. To edit the selected registration, press the [↓] knob and then turn the [↓] knob toward the right.

#### MEMO

If you press the [Registration] button to exit the Registration screen, you will return to the state prior to recalling the registration.



## Saving current settings into a registration

**NOTE**

When you save a registration into a location, it will overwrite any registration already stored at that location.

1. While holding down the [Registration] button, press a button from [1] to [4] to select a registration and then turn the [↵] knob to select a registration variation.
2. Rename the registration.

Select the character which you want to change	Turn the [↵] knob
Change the character	Press the [↵] knob (confirm) ↓ Turn the [↵] knob (change the character) ↓ Press the [↵] knob (back)
Insert one character	Press the [▶/■] button
Delete one character	Press the [●] button

If you decide to cancel, press the [↵] button.

3. Turn the [↵] knob to select the ✓ at the right edge of the screen, and then press the [↵] knob to confirm.

The registration is saved.

**NOTE**

Never turn off the power while the screen indicates “Executing...”

## Saving a registration set (Registration Export)

You can save all registrations held in registration memory into a registration set on a USB flash drive.

1. Connect your USB flash drive to the USB Memory port.

\* Never turn off the power or disconnect a USB flash drive or the power cord while the USB flash drive access indicator is blinking.


2. Press the [⚙] button.

The [⚙] button is lit, and the piano is in function mode.

3. Turn the [↵] knob to access the “Registration Export” screen.

4. Press the [↵] knob to confirm.

The Registration Export screen appears.



5. Rename the registration set.

Select the character which you want to change	Turn the [↵] knob
Change the character	Press the [↵] knob (confirm) ↓ Turn the [↵] knob (change the character) ↓ Press the [↵] knob (back)

Insert one character	Press the [▶/■] button
Delete one character	Press the [●] button

If you decide to cancel, press the [↵] button.

6. Turn the [↵] knob to select the ✓ at the right edge of the screen, and then press the [↵] knob to confirm.

The settings are saved.

**NOTE**

Never turn off the power while the screen indicates “Executing...”

7. Press the [⚙] button to exit function mode.

The [⚙] button goes dark.

## Loading a saved registration set (Registration Import)

Here’s how a registration set that’s saved on a USB flash drive can be loaded into the [Registration] button.

**NOTE**

When you load a registration set, the registrations that were saved in the [Registration] button are overwritten and lost. If you don’t want to lose these registrations, save them to a USB flash drive.

1. Connect your USB flash drive to the USB Memory port.

2. Press the [⚙] button.

The [⚙] button is lit, and the piano is in function mode.

3. Turn the [↵] knob to access the “Registration Import” screen.

4. Press the [↵] knob to confirm.


The Registration Import screen appears.



5. Turn the [↵] knob to select the registration set that you want to load.

6. Press the [↵] knob.

A confirmation message appears.



If you decide to cancel, press the [↵] button.

7. Turn the [↵] knob to select “Yes,” and then press the [↵] knob.

The settings are loaded.

**NOTE**

Never turn off the power while the screen indicates “Executing...”

8. Press the [⚙] button to exit function mode.

The [⚙] button goes dark.

## Playing Different Tones with the Left and Right Hand (Split Play)


You can perform using different tones in the left and right regions of the keyboard, divided at a specific note. This setting is called "Split Play," and the point at which the keyboard is divided is called the "split point."

1. Press the [Split/Dual] button several times to access the Split screen.



When you turn on the power, "European Grand" is selected as the right-hand tone and "A.Bass + Cymbal" is selected as the left-hand tone.

When split turns on, the keyboard settings are as follows.

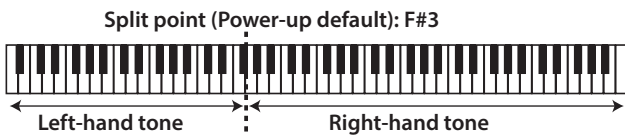

2. To exit the Split Play, press the [Split/Dual] button several times to go dark.

## Changing the settings for Split Play

To edit the following settings, access the Split screen.

	Operation
Changing the left-hand tone (Split-Left Tone)	<ol style="list-style-type: none"> <li>1. Press a tone button. The tone group is selected.</li> <li>2. Turn the [↓] knob to select a tone.                             <ul style="list-style-type: none"> <li>* If you select a sound from the [Piano] button as the left-hand tone, it sounds different than usual.</li> </ul> </li> </ol>
Changing the right-hand tone (Split-Right Tone)	<ol style="list-style-type: none"> <li>1. Press the [↓] knob so that "-""+" is shown in the top line of the screen.</li> <li>2. Turn the [↓] knob to access "Right Tone" screen.</li> <li>3. Press the [↓] knob to confirm.</li> <li>4. Press a tone button. The tone group is selected.</li> <li>5. Turn the [↓] knob to select a tone.</li> </ol>
Changing the point at which tones are separated (Split-Point)	<ol style="list-style-type: none"> <li>1. Press the [↓] knob so that "-""+" is shown in the top line of the screen.</li> <li>2. Turn the [↓] knob to access the screen of the item you want to set.</li> <li>3. Press the [↓] knob to confirm.</li> <li>4. Turn the [↓] knob to select the value that you want to change.</li> </ol>
Changing the volume balance of the left-hand tone and right-hand tone (Split-Balance)	<ol style="list-style-type: none"> <li>1. Press the [↓] knob so that "-""+" is shown in the top line of the screen.</li> <li>2. Turn the [↓] knob to access the screen of the item you want to set.</li> <li>3. Press the [↓] knob to confirm.</li> <li>4. Turn the [↓] knob to select the value that you want to change.</li> </ol>
Changing the octave of the left-hand tone and right-hand tone (Split-Right/Left Shift)	<p><b>MEMO</b></p> <p>You can specify the Split Point by holding down the [Split/Dual] button and pressing the key where you want to split the keyboard.</p>

## Layering Two Tones (Dual Play)

You can play two tones simultaneously from a single key. This function is called "Dual Play."

1. Press the [Split/Dual] button several times to access the Dual screen.



When you turn on the power, "European Grand" is selected as the tone 1 and "Symphonic Str1" is selected as the tone 2.

2. To exit the Dual Play, press the [Split/Dual] button several times to go dark.

## Changing the settings for Dual Play


To edit the following settings, access the Dual screen.

	Operation
Changing tone 2 (Dual-Tone 2)	<ol style="list-style-type: none"> <li>1. Press a tone button. The tone group is selected.</li> <li>2. Turn the [↓] knob to select a tone.                             <ul style="list-style-type: none"> <li>* If you select a sound from the [Piano] button as tone 2, it sounds different than usual.</li> </ul> </li> </ol>
Changing tone 1 (Dual-Tone 1)	<ol style="list-style-type: none"> <li>1. Press the [↓] knob so that "-""+" is shown in the top line of the screen.</li> <li>2. Turn the [↓] knob to access "Tone 1" screen.</li> <li>3. Press the [↓] knob to confirm.</li> <li>4. Press a tone button. The tone group is selected.</li> <li>5. Turn the [↓] knob to select a tone.</li> </ol>
Changing the volume balance of the two tones (Dual-Balance)	<ol style="list-style-type: none"> <li>1. Press the [↓] knob so that "-""+" is shown in the top line of the screen.</li> <li>2. Turn the [↓] knob to access the screen of the item you want to set.</li> <li>3. Press the [↓] knob to confirm.</li> <li>4. Turn the [↓] knob to select the value that you want to change.</li> </ol>
Changing the octave of the two tones (Dual-Tone 1/Tone 2 Shift)	<ol style="list-style-type: none"> <li>1. Press the [↓] knob so that "-""+" is shown in the top line of the screen.</li> <li>2. Turn the [↓] knob to access the screen of the item you want to set.</li> <li>3. Press the [↓] knob to confirm.</li> <li>4. Turn the [↓] knob to select the value that you want to change.</li> </ol>

### Reading the note name (e.g., C4)

The alphabetical indication for settings such as "split point" shows the name of the note.

For example, the indication "C4" means "the fourth 'C' from the left edge of the keyboard."



## Practicing with the Metronome

You can practice while hearing a metronome.

### 1. Press the [M] button.

The [M] button blinks, and the metronome sounds.

#### MEMO

If a song is playing, the metronome sounds at the tempo and time signature of that song.

- To change the tempo, turn the [Tempo] knob.
- To change the time signature, press the [T] knob in the "time signature" screen to confirm, and then turn the [T] knob to make a selection.

Available time signatures	2/2, 3/2, 2/4, 3/4, 4/4, 5/4, 6/4, 7/4, 3/8, 6/8, 8/8, 9/8, 12/8 (default value: 4/4)
---------------------------	--

### 4. To stop the metronome, press the [M] button once again.

The [M] button goes dark.

## Changing the settings for metronome

Change the following settings while the [M] button is on.

	Operation
Changing the time signature	
Suppressing a strong beat (downbeat) on the first beat	1. Press the [T] knob so that "-" "+" is shown in the top line of the screen.
Changing the metronome's pattern	2. Turn the [T] knob to access the screen of the item you want to set. 3. Press the [T] knob to confirm.
Changing the metronome's volume	4. Turn the [T] knob to select the value that you want to change.
Changing the metronome's tone	

## Transposing Your Performance


The keyboard can be transposed in semitone steps.

When accompanying a vocal, or when performing as a singer-instrumentalist, you can transpose the pitch to match the singer's pitch range without changing the fingering of your keyboard playing.

### 1. While holding down the [Transpose] button, turn the [T] knob to select the number of semitones that you want to transpose.

For example if a song is in the key of E major but you want to play it using the fingering of the C major scale, you would set the keyboard transpose setting to "4."

If you play C E G → It will sound E G#B



#### MEMO

You can also change the keyboard transpose setting by holding down the [Transpose] button and pressing the note that will be the tonic (root note) of the transposed key.

### 2. To exit transpose settings, press the [Transpose] button once again.

The [Transpose] button goes dark.

# Listening to Songs

## Playing Back a Song

Here's how you can listen to the built-in songs. You can listen to these internal songs as models for your own playing, or practice one hand at a time along with them.

➔ Refer to the "Internal Song List" at the end of this manual.


### Category list

Category	Explanation
Listening	Piano songs recommended for listening
Ensemble (*)	Famous songs, mainly classical pieces. These include piano concertos, duets, and jazz arrangements of classical pieces. Since this collection contains songs that are challenging to play, they are recommended for those at intermediate level or above.
Entertainment (*)	Arrangements of well-known songs from around the world, including pop, jazz, and children's songs, in arrangements that can be enjoyed by a wide range of people from the beginner to the advanced player.
Do Re Mi Lesson (*)	You can use these lessons to learn the basics of music, by singing solfège along with the songs or practicing score-reading.
Scales (*)	Scales in all keys (major scales, minor scales)
Hanon	The Virtuoso Pianist No.1–20
Beyer	Vorschule im Klavierspiel Op.101 No.1–106
Burgmüller	25 Études faciles et progressives Op.100
Czerny100	100 Übungsstücke Op.139
USB Memory	Songs saved on a USB flash drive
Internal Memory	Songs saved in internal memory

(\*) Songs corresponding to the included collection of scores, "Roland Piano Masterpieces."

### 1. Press the [P] button.

The Song screen appears.

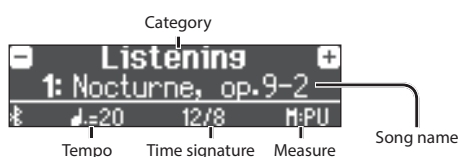

### 2. Turn the [L] knob to select the song category, and press the [L] knob to confirm.

### 3. Turn the [L] knob to select the song name.

You can choose song names within the category.

#### MEMO

If you decide to select a different song category, press the [C] button.

### 4. Press the [P/■] button.

The song plays.

### 5. To stop the song, press the [P/■] button once again.

The [P/■] button goes dark.

### 6. To exit song settings, press the [P] button.

The [P] button goes dark.

## Changing how songs play back

	Operation
Playing back individual performance parts	<p>The built-in songs consist of three parts (right-hand, left-hand, accompaniment), and you can play back just the part(s) that you want to hear.</p> <p>* Some songs don't have a left-hand part or an accompaniment part. In this case, you can't select the corresponding part.</p> <ol style="list-style-type: none"> <li>Press the [Part] button.</li> <li>Turn the [L] knob to select the part that you want to mute.</li> <li>Press the [L] knob to confirm. The selected part is muted.</li> <li>Press the [P/■] button. Only the selected part(s) song play back.</li> </ol>
Change the song tempo	<ol style="list-style-type: none"> <li>Turn the [Tempo] knob.</li> </ol> <p><b>MEMO</b> Long-press the knob to return to the default value.</p>
Play back the song at a constant tempo	<p>This is convenient when you want to practice along with the song playback.</p> <ol style="list-style-type: none"> <li>Hold down the [P/■] button and turn the [Tempo] knob.</li> <li>Select "On."</li> </ol>
Selecting the measure to play back	<ol style="list-style-type: none"> <li>Follow steps 1–3 of "Playing Back a Song."</li> <li>Press the [L] knob. The measure screen appears.</li> <li>Turn the [L] knob to select the measure that you want to play.</li> <li>Press the [P/■] button. The song plays from the specified measure.</li> </ol> <p><b>MEMO</b></p> <ul style="list-style-type: none"> <li>If you long-press the [L] knob, the beginning of the song is selected.</li> <li>Press the [C] button to return to the song select screen.</li> </ul>
Sounding a count before the song plays	<ol style="list-style-type: none"> <li>While holding down the [C] button, press the [P/■] button.</li> </ol>
Play all songs in the selected category	<ol style="list-style-type: none"> <li>While holding down the [P] button, press the [P/■] button.</li> </ol>
Playing back in a different key	<ol style="list-style-type: none"> <li>Press the [T] button. The [T] button is lit, and the piano is in function mode.</li> <li>Turn the [L] knob to access the "Song Transpose" screen.</li> <li>Press the [L] knob to confirm.</li> <li>Turn the [L] knob to select the number of semitones that you want to transpose.</li> <li>Press the [P/■] button. The song playback is transposed.</li> </ol>
Playing songs from a folder on a USB flash drive	<ol style="list-style-type: none"> <li>Press the [P] button, and turn the [L] knob to select "USB Memory."</li> <li>Press the [L] knob to confirm.</li> </ol> <p><b>Enter the folder</b></p> <ol style="list-style-type: none"> <li>Turn the [L] knob to select the desired folder.</li> <li>Press the [L] knob to confirm.</li> </ol> <p><b>Exit the folder</b></p> <ol style="list-style-type: none"> <li>Turn the [L] knob toward the left to select "Up."</li> <li>Press the [L] knob to confirm.</li> </ol>

# Recording Your Performance

## Recording Your Keyboard Performance

You can record your own keyboard performance, and then play back to check it.

### Getting Ready to Record

#### 1. Select the tone that you want to play.

#### 2. You can sound the metronome if you like.

Set the metronome's tempo and time signature. The metronome setting is stored in the song, and you can use the same settings during playback.

#### 3. Press the [●] button.

The [●] button lights, the [▶/■] button blinks, and the piano enters record-standby mode.

If you decide to cancel recording, press the [●] button once again.

### Starting/Stopping Recording

#### 4. Press the [▶/■] button.

After a one-measure count, recording starts, and the [●] button and [▶/■] button are both lit. The performance is saved automatically.

#### MEMO

You can also start recording by playing the keyboard instead of pressing the [▶/■] button. In this case, a count is not sounded.

#### 5. To stop recording, press the [▶/■] button once again.

Recording stops.

### Listening to the Recorded Performance

#### 6. Press the [▶/■] button.

After you record, the newly recorded song is selected. The recorded song starts playing back.

## Deleting a Saved Song

You can delete a song that you saved.

#### MEMO

- You can also delete a recorded song by holding down the [●] button and pressing the [↵] button.
- If you want to delete all songs that have been saved to internal memory, initialize the memory ("Initializing the Memory (Format Media)" (p. 23)).


#### 1. Press the [✳] button.

The [✳] button is lit, and the piano is in function mode.

#### 2. Turn the [↓] knob to access the "Delete Song" screen.

#### 3. Press the [↓] knob to confirm.


The Delete Song screen appears.



#### 4. Turn the [↓] knob to select the media that contains the song you want to delete, and press the [↓] knob to confirm.

#### 5. Turn the [↓] knob to select the song that you want to delete, and press the [↓] knob to confirm.

A confirmation message appears.



If you decide to cancel, press the [↵] button.

#### 6. Turn the [↓] knob to select "Yes," and press the [↓] knob to confirm.

The deletion is executed.

## Managing songs you recorded

	Operation										
Renaming a recorded song	You can rename a saved song.										
	1. Press the [✳] button. The [✳] button is lit, and the piano is in function mode.										
	2. Turn the [↓] knob to access the "Rename Song" screen, and press the [↓] knob to confirm.										
	3. Turn the [↓] knob to select the media that contains the song you want to rename, and press the [↓] knob to confirm.										
	4. Turn the [↓] knob to select the song that you want to rename, and press the [↓] knob to confirm.										
	5. Rename the song.										
	<table border="1"> <tr> <td>Select the character which you want to change</td> <td>Turn the [↓] knob</td> </tr> <tr> <td rowspan="3">Change the character</td> <td>Press the [↓] knob (confirm)</td> </tr> <tr> <td>↓ Turn the [↓] knob (change the character)</td> </tr> <tr> <td>↓ Press the [↓] knob (back)</td> </tr> <tr> <td>Insert one character</td> <td>Press the [▶/■] button</td> </tr> <tr> <td>Delete one character</td> <td>Press the [●] button</td> </tr> </table>	Select the character which you want to change	Turn the [↓] knob	Change the character	Press the [↓] knob (confirm)	↓ Turn the [↓] knob (change the character)	↓ Press the [↓] knob (back)	Insert one character	Press the [▶/■] button	Delete one character	Press the [●] button
	Select the character which you want to change	Turn the [↓] knob									
Change the character	Press the [↓] knob (confirm)										
	↓ Turn the [↓] knob (change the character)										
	↓ Press the [↓] knob (back)										
Insert one character	Press the [▶/■] button										
Delete one character	Press the [●] button										
6. Turn the [↓] knob to select the ✓ at the right edge of the screen, and then press the [↓] knob to confirm. A confirmation message appears.											
7. Turn the [↓] knob to select "Yes," and press the [↓] knob to confirm. The song is renamed. * Never turn off the power or disconnect the USB flash drive while the screen indicates "Executing..."											
8. Press the [✳] button. You exit function mode.											

	Operation
Copying a recorded song	Songs that have been saved in internal memory can be copied to USB flash drive. Alternatively, songs stored on a USB flash drive can be copied to internal memory.
	<b>1. Press the [F] button.</b> The [F] button is lit, and the piano is in function mode.
	<b>2. Turn the [A] knob to access the "Copy Song" screen, and press the [A] knob to confirm.</b>
	<b>3. Turn the [A] knob to select the copy-source and copy-destination media, and press the [A] knob to confirm.</b>
	<b>4. Turn the [A] knob to select the song that you want to copy.</b> If you decide to cancel, press the [ESC] button.
	<b>5. Press the [A] knob.</b> The copy is executed. <small>* Never turn off the power or disconnect the USB flash drive while the screen indicates "Executing..."</small>
	<b>6. Press the [F] button.</b> You exit function mode.

## Advanced Recording Methods

### Recording Your Performance One Hand at a Time

By recording your left-hand performance to the Left part and your right-hand performance to the Right part, you can record each hand of your performance separately.



Left (or right) part

### Getting ready to record

**1. Select the tone that you want to play.**

**2. You can sound the metronome if you like.**

Set the metronome's tempo and time signature. The metronome setting is stored in the song, and you can use the same settings during playback.

**3. Press the [RECORD] button.**

The [RECORD] button lights, the [PART] button blinks, and the piano enters record-standby mode.

If you decide to cancel recording, press the [RECORD] button once again.

**4. Press the [Part] button and turn the [A] knob to select the part that you don't want to record; then press the [A] knob to make it go dark.**

Only the part that you're recording will blink.

#### MEMO

If you don't select a part at this time, your performance is recorded to the following parts.

Performing with one tone	"Right" part
Performing different tones with the left and right hands (Split Play)	The left-hand tone is the "Left" part, and the right-hand tone is the "Right" part
Performing with two tones layered (Dual Play)	The tone 1 is the "Right" part, and the tone 2 is the "Accomp" part

### Starting/stopping recording

**5. Press the [PART] button.**

After a one-measure count, recording starts, and the [RECORD] button and [PART] button are both lit. The performance is saved automatically.

#### MEMO

You can also start recording by playing the keyboard instead of pressing the [PART] button. In this case, a count is not sounded.


**6. To stop recording, press the [PART] button once again.**

Recording stops.

## Overdubbing a Recorded Performance

After recording one hand of your performance, you can overdub-record the performance of the other hand.

You can also overdub-record onto a built-in song.

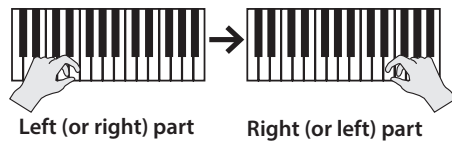

## Getting ready to record

### 1. Press the [Part] button.

The Song screen appears.

#### MEMO

If the measure screen appears, press the [Back] button to return to the song-select screen.

### 2. Turn the [Down] knob to select the category of the song that you want to overdub, and press the [Down] knob to confirm.

### 3. Turn the [Down] knob to select the song that you want to overdub.

You can select songs within the category.

#### MEMO

If you're recording your performance along with a built-in song, you can fix the tempo of the built-in song (p. 12).

### 4. Press the [Record] button.

The [Record] button lights, the [Play/Pause] button blinks, and the piano enters record-standby mode.

If you decide to cancel recording, press the [Record] button once again.

### 5. Turn the [Down] knob to access the "Overdub" screen.

The song of step 3 is selected.



### 6. Press the [Part] button; if a part that you don't want to record is blinking, turn the [Down] knob to select the part, and press the [Down] knob to make it go dark.

If you select a part that is already recorded (lit) and then press the [Down] knob to make it blink, that part will be overwrite-recorded.

## Starting/stopping recording

### 7. Press the [Play/Pause] button.

After a one-measure count, recording starts, and the [Record] button and [Play/Pause] button are both lit. The performance is saved automatically.

#### MEMO


You can also start recording by playing the keyboard instead of pressing the [Play/Pause] button. In this case, a count is not sounded.

### 8. To stop recording, press the [Play/Pause] button once again.

Recording stops.

## Recording Audio to USB Flash Drive

If you audio-record your performance, you'll be able to listen to it on your computer or audio player, use it to create a music CD, or publish it on the internet.

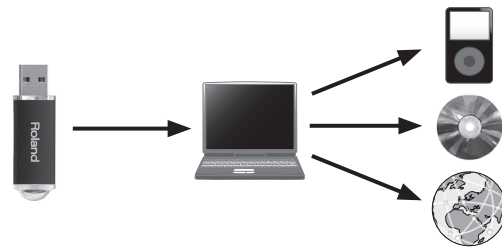

## Getting ready to record

### 1. Connect your USB flash drive to the USB Memory port.

- \* Audio data can't be saved in the piano's internal memory.
- \* Never turn off the power or disconnect a USB flash drive or the power cord while the USB flash drive access indicator is blinking.

### 2. Select the tone that you want to play.

### 3. Hold down the [Record] button and turn the [Down] knob to select "Audio."

#### MEMO

You can also specify this via the Function mode "Recording Mode" setting (p. 25).

### 4. Press the [Record] button.

The [Record] button lights, the [Play/Pause] button blinks, and the piano enters record-standby mode.

If you decide to cancel recording, press the [Record] button once again.

### 5. You can sound the metronome if you like.

## Starting/stopping recording

### 6. Press the [Play/Pause] button.

Recording starts, and the [Record] button and [Play/Pause] button are lit. The performance is saved automatically.

#### NOTE

Never turn off the power or disconnect the USB flash drive during recording.

### 7. To stop recording, press the [Play/Pause] button once again.

Recording stops.

#### MEMO

- You can delete the song that you recorded (p. 13).
- You can rename the song that you recorded (p. 13).

# Creating Your Own Piano Tone (Piano Designer)

This piano lets you adjust various elements of the sound, so you can personalize the piano tone to your taste. This function is called “Piano Designer.”

## MEMO

The process of creating your own piano tone can also be done using touch operations on the dedicated app.

➔ “Using the Piano with an App” (p. 20)



App “Piano Designer”



## Adjusting the Sound of the Overall Piano

1. Press the [Piano Designer] button.
2. Turn the [↕] knob to access the screen of the item that you want to adjust.
3. Press the [↵] knob to confirm.
4. Turn the [↕] knob to choose the value of the setting.
5. To exit the settings, press the [Piano Designer] button.

The [Piano Designer] button goes dark.

Items	Value	Explanation
My Stage		By selecting “My Stage,” you can play the piano at home while enjoying your favorite performance environment. The atmosphere of the sound and acoustics of playing a grand piano in various environments such as a concert hall, church, or recording studio. * This setting is only for Grand Piano tones.
		<b>Piano Recital, At Hall Stage, Lakeside Studio, Impressionists, Heritage Hall, Lounge Concert, Church Concert, Jazz Club, Medieval Salon, Recording Studio, Trad Opera House, East Coast Hall</b>
Ambience	<b>Ambience Type</b> (only for Grand Piano tones)	Selects the ambience that is characteristic of playing a piano in various locations. <b>Studio, Lounge, Concert Hall, Wooden Hall, Stone Hall, Cathedral</b>
	<b>Ambience Depth</b>	Adjusts the depth of the sound’s ambience. Higher settings produce deeper ambience, and lower settings produce less ambience. * The reverberation effect is not applied to audio files. <b>0–10</b>
Key Touch	<b>Fix, 1–100</b> (default value: 50)	You can change the playing feel (touch) of the keyboard. The default value of 50 provides a key touch that is closest to that of an acoustic piano. Higher settings make the keyboard feel heavier. With the “Fix,” notes sound at a fixed volume regardless of how strongly you play the keyboard.
Brilliance	<b>-10–0–+10</b> (default value: 0)	You can adjust the brightness of the sound when you play the keyboard or when you play back a song. Higher values produce brighter sounds.
Master Tuning	<b>415.3 Hz–466.2 Hz</b> (default value: 442.0 Hz)	When playing in an ensemble with other instruments, you can adjust the reference pitch of this piano so that you will harmonize correctly with the other instruments. The reference pitch is usually expressed as the frequency that is heard when you play the middle A (A4) note. The action of matching the reference pitch to other instruments is called “tuning.”



Items	Value	Explanation
Temperament		You can play classical styles such as Baroque using historic temperaments (tuning methods). Most modern songs are composed for and played in equal temperament, the most common tuning in use today. But at one time, there were a wide variety of other tuning systems in existence. By playing in the temperament that was in use when a composition was created, you can experience the sonorities of chords originally intended for that song.
	Equal (default value)	This temperament divides the octave into twelve equal steps. It is the temperament that is most commonly used on today's pianos. Every interval has the same slight amount of dissonance.
	Just Major	In these temperaments, the primary triads are perfectly consonant. It is unsuited to playing melodies and cannot be transposed, but is capable of beautiful sonorities. The Just tunings differ from major and minor keys.
	Just Minor	
	Pythagorean	This tuning, devised by the philosopher Pythagoras, eliminates dissonance in fourths and fifths. Although triadic chords are slightly dissonant, this tuning is suitable for songs that have a simple melody.
	Kirnberger I	As in the Just temperaments, the primary triads are consonant in this tuning. Beautiful sonorities are obtained when playing songs that are written in keys appropriate for this tuning.
	Kirnberger II	This is a revision of Kirnberger I that reduces the limitations on the usable keys.
	Kirnberger III	This is an improvement of the Meantone and Just tunings that provides a high degree of freedom of modulation. Performances are possible in all keys. Since the resonance differs depending on the key, chords played in this temperament resonate in diverse ways when compared to equal temperament.
	Meantone	This temperament slightly narrows the fifth relative to Just temperaments. While the Just temperaments contains two types of whole tone (major whole tone and minor whole tone), meantone temperament uses only one type of whole tone (mean whole tone). Transposition within a limited range of keys is possible.
	Werckmeister	This temperament consists of eight perfect fifths and four narrowed fifths. Performance in all keys is possible. Since different keys produce different sonorities, chords will resonate in diverse ways when compared to equal temperament (Werckmeister I (III)).
Arabic	This tuning is suitable for the music of Arabia.	
Temperament Key	C-B (default value: C)	When playing with tuning other than equal temperament, you need to specify the temperament key for tuning the song to be performed (that is, the note that corresponds to C for a major key or to A for a minor key). If you choose an equal temperament, there's no need to select a temperament key.
Hammer Response	Off, 1-10 (default value: 1)	Adjusts the time from when you play the key until the piano sound is heard. Higher values produce a greater delay.

English

Deutsch

Français

Italiano

Español

Português

Nederlands

## Editing the Grand Piano Tone

You can adjust various aspects of the grand piano's tone, including the string and pedal resonances, and the sound of the hammers striking the strings.

\* This function is only for Grand Piano tones.

1. Press the [Piano Designer] button.
2. Turn the [↵] knob to access the "Piano Tone Edit" screen.
3. Press the [↵] knob to confirm.
4. Turn the [↵] knob to access the screen of the item that you want to edit.
5. Press the [↵] knob to confirm, and turn the [↵] knob to choose the value of the setting.

6. When you are finished editing the piano tone, press [↵] button.

A confirmation message appears.



If you decide to cancel, press the [↵] button.

7. Turn the [↵] knob to select "Yes," and press the [↵] knob to confirm.

The Grand Piano tone settings are saved.

	Items	Value	Explanation
Piano Tone Edit	Lid	0-6	Adjusts the extent to which the top lid of the grand piano is open. The sound will become more mellow as you close the top lid of the piano in the screen. The sound will become brighter as you open the top lid of the piano in the screen.
	Key Off Noise	Off, 1-10	Adjusts the action noise that is heard when you release a key. Higher settings produce a louder action noise.
	Hammer Noise	-5-0-+5	Adjusts the sound produced when the hammer of an acoustic piano strikes the string. Higher settings will produce a louder sound of the hammer striking the string.
	Duplex Scale	Off, 1-10	Adjusts the sympathetic vibrations of an acoustic piano's Duplex Scale. Higher settings will make the sympathetic vibration louder. The Duplex Scale is a system of sympathetically vibrating strings sometimes included in grand pianos. These sympathetically vibrating strings are not struck directly with hammers, but sound by vibrating in sympathy with the vibrations of other strings. By resonating with the overtones, these strings add richness and brilliance to the sound. These sympathetic strings are added only to the high register above approximately C4. Since they do not have a damper (a mechanism that stops them from sounding), they will continue sounding even after you play a note and then release it to stop the sound of the string that was actually struck.
	Full Scale String Res.	Off, 1-10	Adjusts the resonant sound of an acoustic piano (the sound produced by the strings of previously-pressed keys vibrating in sympathy with newly played notes, or the sound of other strings vibrating in sympathy with the notes you play while pressing the damper pedal). Higher settings produce louder sympathetic resonance.
	Key Off Resonance	Off, 1-10	Adjusts the resonance of the subtle sounds that occur when a key of an acoustic piano is released. A higher value produces a larger tonal change during the decay.
	Cabinet Resonance	Off, 1-10	Adjusts the body resonance of the grand piano itself. Higher values will produce a larger body resonance.
	Soundboard Type	1-5	Selects how the soundboard of the acoustic piano will resonate. You can choose from five different types of resonance.
	Damper Noise	Off, 1-10	Adjusts the damper noise of the acoustic piano sound (the sound of the damper releasing the strings when you press the damper pedal).
	Soft Pedal	1-10	Adjusts the depth of the effect that occurs when you press the soft pedal. With higher values, the change will be greater.
	Single Note Tuning (*)	-50-0-+50	Adjusts the tuning of each individual key. For example, you can adjust the width of stretched tuning, which tunes the higher register slightly higher and the lower register slightly lower.
	Single Note Volume (*)	-50-0	Adjusts the volume of each key. Lower settings decrease the volume.
	Single Note Character (*)	-5-0-+5	Adjusts the tonal character of each key. Higher settings produce a harder sound, and lower settings produce a softer tone. * The result of this effect will differ depending on the pitch range.
Reset Setting	Resets the "Piano Tone Edit" settings of the selected tone to their factory settings.		

### Single Note settings (\*)

1. Select the Single Note settings screen, and press the [↵] knob to confirm.

2. Play the key for which you want to make adjustments, and turn the [↵] knob to change the value.
3. Press the [↵] button to exit the screen of that item.

# Connecting the Piano and a Mobile Device via Bluetooth



## Provision of Bluetooth functionality

Please be aware that depending on the country in which you purchased the piano, Bluetooth functionality might not be included.

If Bluetooth functionality is included

The Bluetooth logo appears when you turn on the power.



## Here's What You Can Do

By using the Bluetooth function, you can wirelessly connect the piano with a mobile device such as your smartphone or tablet, allowing you to do the following things.


A song played back on your mobile device can be heard wirelessly through the piano's speakers. You can also play the piano along with the song that's being played back.

→ "Play Music Through the Piano's Speakers" (p. 19)



Use the piano together with an app, and enjoy a variety of content that's available only in the app.

→ "Using the Piano with an App" (p. 20)

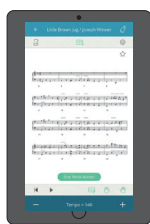

App "Piano Every Day"

## Setting Procedure

### Pairing

To wirelessly connect the piano with your mobile device, you must first perform "pairing" to create a one-to-one connection between the piano and your mobile device.

"Pairing" is the procedure of registering (mutually authenticating) your mobile device with the piano.



### The pairing process

Separate pairing is required for "playing music through the piano's speakers" and for "using the piano with an app." Note that these processes are different.

Playing music through the piano's speakers

Using the piano with an app



Settings on the piano



Settings on the mobile device



Settings on the mobile device



Settings on the App

## Play Music Through the Piano's Speakers


Make settings so that music data saved on your smartphone or other mobile device can be played wirelessly through the piano's speakers. As an example, we explain how to make settings for an iOS product.

\* Once a mobile device has been paired with this piano, there is no need to perform pairing again. Refer to "Connecting an already-paired mobile device" (p. 20)


### Pairing

1. Place the mobile device that you want to connect near the piano.
2. Press the [⊗] button.  
The [⊗] button is lit, and the piano is in function mode.
3. Turn the [↵] knob to access the "Bluetooth" screen, and press the [↵] knob to confirm.

The following screen appears.



4. Press the [↵] knob to begin pairing.




If you decide to cancel pairing, press the [⏪] button.

5. Turn on the Bluetooth function of the mobile device.



6. Tap "LX708 Audio," "LX706 Audio," or "LX705 Audio" that appears in the mobile device's Bluetooth "DEVICES" field.

The piano and mobile device are paired. When pairing is completed, a display like the following appears.

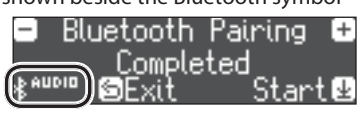Mobile device	"LX708 Audio," "LX706 Audio," or "LX705 Audio" are added in the "My Devices" field
Piano	The screen indicates "Completed," and "AUDIO" is shown beside the Bluetooth symbol 

7. Press the piano's [⊗] button to exit function mode.  
Pairing is complete.

## Playing back audio

When you play back music data on the mobile device, the sound is heard from the piano's speakers.

### MEMO

To adjust the volume of the audio, make adjustments on your mobile device. If this does not produce the desired volume, you can adjust the piano's settings.

➔ "Input/Bluetooth Vol." (p. 24)

## Connecting an already-paired mobile device





### 1. Turn on the Bluetooth function of the mobile device.

The piano and mobile device are connected wirelessly.

\* If the above step does not establish a connection, tap "LX708 Audio," "LX706 Audio," or "LX705 Audio" that are shown in the "DEVICES" field of the mobile device.

## Using the Piano with an App

Apps you can use with this piano

App name	Supported OS	Explanation
 Piano Every Day	iOS Android	This app lets you download electronic scores, practice songs as if you were playing a game, or keep a record of your practicing. 
 Piano Designer	iOS Android	This app lets you customize the piano sound to your taste. It provides touch-based editing within the app for the various elements of the sound in "Creating Your Own Piano Tone (Piano Designer)" (p. 16). 

- \* Apps can be downloaded from the App Store (iOS products) or from Google Play (Android products).
- \* In addition to the above, you can also use music apps (such as Garage Band) that are compatible with Bluetooth MIDI.
- \* The information provided about apps made by Roland was current when this manual was published. For the latest information, refer to the Roland website.

## Pairing

You can make settings for using the piano together with an app that's installed on your mobile device. As an example, we'll explain the procedure for using an iOS product with the "Piano Every Day" app.

\* In the case of "using the piano with an app," settings on the piano are not necessary. Perform operations in the app to pair it with the piano.

### 1. Turn on the Bluetooth function of the mobile device.




### NOTE

Even if the "DEVICES" field shows the name of the device you're using (such as "LX708 MIDI"), do not tap it.

### 2. Start the app that you installed on your mobile device.


### 3. Tap the menu located in the lower right of the app screen, and then in the menu screen tap "Bluetooth."

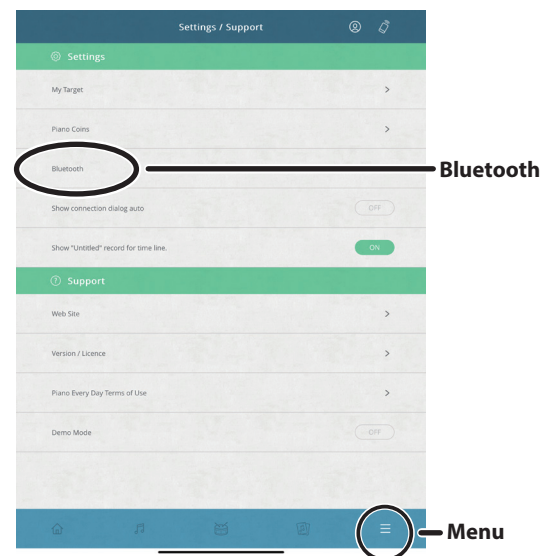

The screen of your mobile device shows "LX708 MIDI," "LX706 MIDI," or "LX705 MIDI."

### 4. Tap either "LX708 MIDI," "LX706 MIDI," or "LX705 MIDI" depending on the unit that you're using.

The piano and mobile device are paired. When pairing is completed, a display like the following appears.










Mobile device	"LX708 MIDI," "LX706 MIDI," or "LX705 MIDI" are added in the "MY DEVICES" field
Piano	The "MIDI" is shown beside the Bluetooth symbol 

## If You Can't Connect via Bluetooth for Use with an App

If the pairing process of "Using the Piano with an App" (p. 20) is not successful, try the following procedure.

- 1 Make sure that the piano's Bluetooth function is "On"
- 2 Exit all apps on your mobile device
- 3 If already paired, cancel pairing, and turn off the Bluetooth function
- 4 Perform the pairing procedure of p. 20 from step 1


### 1 Make sure that the piano's Bluetooth function is "On"

1. Press the piano's  button.  
The  button is lit, and the piano is in function mode.
2. Turn the  knob to access the "Bluetooth" screen, and press the  knob to confirm.  
You enter the Bluetooth setting screen.
3. Turn the  knob to access the "Bluetooth On/Off" screen, and press the  knob to confirm.
4. Turn the  knob to select "On."  
The piano's Bluetooth function turns on.
5. Press the  button.  
The  button goes dark, and you exit function mode.

### 2 Exit all apps on your mobile device

#### Closing the app


Double-click the home button, and swipe up on the app screen.

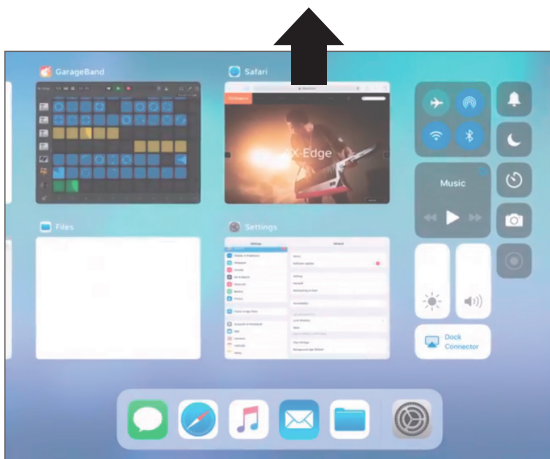


### 3 If already paired, cancel pairing, and turn off the Bluetooth function

#### Clearing the pairing

1. In the mobile device's screen, tap the "i" located beside "Connected," and tap "Forget This Device."

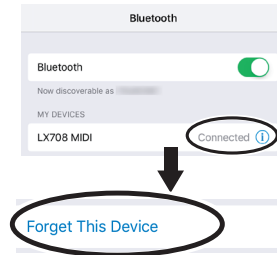

2. Turn the Bluetooth switch off.

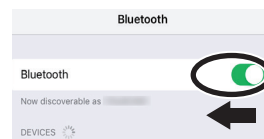

### 4 Perform the pairing procedure of p. 20 from step 1

If you've checked the steps to take when pairing is not successful, and are still unable to connect with the app, access the following URL and find your nearest Roland Service Center or authorized Roland distributor in your country.






<http://roland.cm/service>

## If you have more than one piano

When pairing with a mobile device in a situation where there are multiple pianos, such as in a music classroom, you can assign an ID to each piano.

#### Assigning an ID

When you make this setting, an ID number is added to the end of the device name that's shown on the mobile device. (such as "LX708 Audio1" "LX708 MIDI 1")

1. Press the  button.
2. Access the "Bluetooth" screen, and press the  knob to confirm.
3. Turn the  knob to select "Bluetooth ID."
4. Press the  knob to confirm, and turn the  knob to change the number.

ID	Explanation
0-99	Set to "0": "LX708 Audio" "LX708 MIDI" (default value) Set to "1": "LX708 Audio 1" "LX708 MIDI 1"

\* If you are pairing in an environment where there are multiple pianos, we recommend that you turn on the power of the mobile device and only those pianos that you want to pair (turn off the power of other devices).

# Convenient Functions

## Loading/Saving Piano Setups

You can save your own piano settings in a USB flash drive, or load them into the other digital piano.

\* Settings can be loaded only into another piano of the same model.

### Settings that are saved

Setting	Page	Setting	Page
Speaker volume	p. 6	Temperament	p. 17
Headphone volume	p. 7	Temperament Key	p. 17
Ambience	p. 16	Hammer Response	p. 17
Key Touch	p. 16	Piano Tone settings	p. 18
Brilliance	p. 16	Volume Limit	p. 27
Master Tuning	p. 16		

## Saving Piano Settings (Piano Setup Export)

**1. Connect your USB flash drive to the USB Memory port.**

**2. Press the [F] button.**

The [F] button is lit, and the piano is in function mode.

**3. Turn the [L] knob to access “Piano Setup Export” screen, and then press the [L] knob.**

The Piano Setup Export screen appears.



**4. Rename the piano settings.**

Select the character which you want to change	Turn the [L] knob	
Change the character	Press the [L] knob (confirm) ↓ Turn the [L] knob (change the character) ↓ Press the [L] knob (back)	
	Insert one character	Press the [▶/■] button
	Delete one character	Press the [●] button

**5. Turn the [L] knob to select the ✓ at the right edge of the screen, and then press the [L] knob to confirm.**

The settings are saved.

### NOTE

Never disconnect the USB flash drive or turn off the power while the screen indicates “Executing...”

**6. Press the [F] button to exit function mode.**

The [F] button goes dark.

## Loading Piano Settings (Piano Setup Import)

**1. Connect your USB flash drive to the USB Memory port.**

**2. Press the [F] button.**

The [F] button is lit, and the piano is in function mode.

**3. Turn the [L] knob to access “Piano Setup Import” screen, and then press the [L] knob.**


The Piano Setup Import screen appears.



**4. Turn the [L] knob to select the piano settings that you want to load.**

**5. Press the [L] knob to confirm.**

A confirmation message appears.



If you decide to cancel, press the [↵] button.

**6. Turn the [L] knob to select “Yes,” and press the [L] knob to confirm.**

The settings are loaded.

### NOTE

Never turn off the power or disconnect the USB flash drive while the screen indicates “Executing...”

**7. Press the [F] button to exit function mode.**

The [F] button goes dark.

## Initializing the Memory (Format Media)

Here's how to erase all of the files that you saved in internal memory or on a USB flash drive (sold separately).

### NOTE

- When you initialize, all registrations or files that you saved in internal memory or on a USB flash drive are lost.
- If you want settings other than the memory settings to be returned to their factory-set state, execute a Factory Reset (p. 23).


### 1. If you want to initialize a USB flash drive, connect the USB flash drive to the USB Memory port.

### 2. Press the [⊗] button.

The [⊗] button is lit, and the piano is in function mode.

### 3. Turn the [↘] knob to access "Format Media" screen, and then press the [↘] knob.

The Format Media screen appears.




If you decide to cancel, press the [↵] button.

### 4. Turn the [↘] knob to select the media (Internal Memory or USB Memory) that you want to format.

### 5. Press the [↘] knob to confirm.

A confirmation message appears.



If you decide to cancel, press the [↵] button.

### 6. Turn the [↘] knob to select "Yes," and press the [↘] knob to confirm.

The memory is formatted.

### NOTE

Never disconnect the USB flash drive or turn off the power while the screen indicates "Executing..."

### 7. Press the [⊗] button to exit function mode.

The [⊗] button goes dark.

## Restoring the Factory Settings (Factory Reset)

Here's how to restore all registrations and internally saved settings to the factory-set condition. This function is called "Factory Reset."

### NOTE

Factory Reset erases all settings that you have stored, and returns them to the factory-set condition. For details on the settings that are reset, refer to "Settings Saved Even If the Power Is Turned Off" (p. 28).

### MEMO


Executing this function does not erase the files in internal memory or on a USB flash drive (sold separately). If you want to erase all files from internal memory or from a USB flash drive, refer to ("Initializing the Memory (Format Media)" (p. 23)).

### 1. Press the [⊗] button.

The [⊗] button is lit, and the piano is in function mode.

### 2. Turn the [↘] knob to access "Factory Reset" screen, and then press the [↘] knob.

A confirmation message appears.



If you decide to cancel, press the [↵] button.

### 3. Turn the [↘] knob to select "Yes," and press the [↘] knob to confirm.

The memory is reset to its factory values.

### NOTE

Never turn off the power while the screen indicates "Executing..."

### 4. Turn the power off, then on again.



# Making Various Settings (Function Mode)

## Basic Settings in Function Mode

### 1. Press the [F] button.

The [F] button is lit, and the piano is in function mode.

### 2. Turn the [V] knob to access the screen of the item you want to set.

### 3. Press the [V] knob to confirm.

\* Depending on the item you select, there might be another screen for selecting additional items.

### 4. Turn the [V] knob to change the value.

### 5. Press the [F] button to exit function mode.

The [F] button goes dark.

Indication	Value	Explanation	
<b>Bluetooth-related settings</b>			
Bluetooth		<b>Turning the Bluetooth Function On/Off (Bluetooth On/Off)</b>	
	Bluetooth On/Off	If the Bluetooth function is on, you'll be able to wirelessly connect the piano and your mobile device, so that music played back from the mobile device can be heard through the piano's speakers, or so that you can use the piano with an app. (p. 19) <b>On, Off</b>	
	Bluetooth Pairing	Perform the pairing to wirelessly connect the piano and mobile device for "Playing Music Through the Piano's Speakers." (p. 19)	
		<b>Adjusting the Volume of Bluetooth Audio (Input/Bluetooth Vol.)</b>	
	Input/Bluetooth Vol.	This is the volume setting for playing music from your mobile device through the piano's speakers. (p. 20) <b>0-10</b>	
	Bluetooth ID	If you are using the Bluetooth function in a location where there are multiple pianos, you can assign a separate ID to each piano. (p. 21) <b>0-99</b>	
<b>Keyboard-related settings</b>			
		<b>Dividing the Keyboard for Two People (Twin Piano)</b>	
		You can divide the keyboard into left and right areas so that two people can play the same range of pitches. One person can play a model performance, and the other person can practice along with that model performance. You can also change the way (Mode) in which notes are sounded in Twin Piano. * If you select a sound from the [Piano] button, it sounds different than usual.	
Twin Piano	Off	The same keyboard setting as a conventional acoustic piano.	
	On	Mode	To select the mode for Twin Piano, select "On" in the Twin Piano screen of function mode, and then perform the following procedure. (1) Press the [T] button twice to access the "Twin Piano" screen → (2) Press the [V] knob to make "-""+" appear at the left and right of "Tone" in the screen → (3) Turn the [V] knob toward the right to access the "Mode" screen → (4) Press the [V] knob to confirm, and turn the [V] knob to select either "Pair" or "Individual"
		Pair	Notes played in the right area are louder in the right speaker; notes played in the left area are louder in the left speaker.
	Individual	Notes played in the right area are heard only from the right speaker; notes played in the left area are heard only from the left speaker. When using headphones, you won't be able to hear the other person's playing.	
<b>Song playback settings</b>			
		<b>Transposing the Pitch of the Song Playback (Song Transpose)</b>	
Song Transpose		You can transpose the song playback in semitone steps. (p. 12) <b>-12-0+12</b>	
		<b>Adjusting the Song (SMF) Volume (Song Volume SMF)</b>	
Song Volume SMF		This setting adjusts the volume of your keyboard performance while a song plays back. This adjusts the volume of the song (SMF data) that is played back. <b>0-10</b>	



Indication	Value	Explanation
Song Volume Audio	<b>Adjusting the Song (Audio) Volume (Song Volume Audio)</b>	
	This setting adjusts the volume of your keyboard performance while a song plays back. This adjusts the volume of the song (audio data) that is played back.	
	0–10	
Input/Bluetooth Vol.	<b>Adjusting the Volume of an Audio Playback Device (Input/Bluetooth Vol.)</b>	
	This setting adjusts the volume of your keyboard performance while a song plays back. You can adjust the volume of an audio playback device that's connected to the Input jacks.	
	0–10	
SMF Play Mode	<b>Specifying the Keyboard Tone for Song (SMF) Playback (SMF Play Mode)</b>	
	This setting specifies the tone that you play on the keyboard while a song is playing back. Normally you will use the "Auto-Select" setting. This determines whether the setting that is most suitable for the internal song or most suitable for external data is selected when you play back a song whose file format is SMF.	
	<b>MEMO</b> You can also switch the SMF Play Mode by holding down the [▶/■] button and turning the [↻] knob. * If the SMF playback mode is set to "External" some effects are not applied to the sound, meaning that the tonal character might differ from when you usually play the keyboard.	
	<b>Auto-Select</b>	Either "Internal" or "External" is selected automatically depending on the song that you play back.
	<b>Internal</b>	When you play back a song, the tone that you play from the keyboard changes to the tone that is saved in the song. This is recommended when you play back an internal song or a song that you recorded on this piano.
<b>External</b>	The tone that you play from the keyboard does not change when you play back a song. This is recommended when you play back external data such as commercially available music data.	
<b>Recording-related settings</b>		
Recording Mode	This piano lets you record in two different modes. You can choose whether to record as SMF or as audio.	
	<b>MEMO</b> You can also switch recording modes by holding down the [●] button and turning the [↻] knob.	
	<b>SMF</b>	Your performance is recorded to "Internal Memory" and played back on the piano. You can overdub your left-hand performance onto your right-hand performance, and then listen to the playback of both hands together. (p. 13)
	<b>Audio</b>	Your performance is recorded to a USB flash drive as audio data. You can listen to your recorded piano performance on a computer or audio player, use it to create a CD, or publish it on the internet. (p. 15)
<b>Delete Song</b>	Deletes a song that was saved in the piano's internal memory or on a USB flash drive. (p. 13)	
<b>Rename Song</b>	Renames a saved song. (p. 13)	
<b>Copy Song</b>	Songs that have been saved in internal memory can be copied to USB flash drive. Alternatively, songs stored on a USB flash drive can be copied to internal memory. (p. 14)	
<b>Count-in Measure</b>	You can change the number of measures that are sounded as a count before song playback or recording begins.	
	1 Measure, 2 Measures	
<b>Pedal-related settings</b>		
Damper Pedal Part	<b>Changing How the Pedal Effects Are Applied (Damper Pedal Part)</b>	
	When you press the right pedal while using Dual Play or Split Play (p. 10), the pedal effect is applied to both tones, but you can choose the tone to which the effect is applied.	
	<b>Right &amp; Left</b>	All enabled
	<b>Right</b>	Applied only to the Tone 1 (in dual mode)/Right-hand Tone (in split mode)
	<b>Left</b>	Applied only to the Tone 2 (in dual mode)/Left-hand Tone (in split mode)

English

Deutsch

Français

Italiano

Español

Português

Nederlands

Indication	Value	Explanation
<b>Changing How the Pedals Work (Center Pedal)</b>		
Center Pedal	When you turn on the power, the center pedal functions as the sostenuto pedal (p. 7). You can change the function of the pedal to a variety of other operations. By assigning a function to the pedal, you can instantly change a setting by pressing the pedal while you perform.	
	Sostenuto	The pedal functions as a sostenuto pedal.
	Play/Stop	The pedal has the same function as the [▶/■] button.
	Layer	Pressing the pedal will layer on Tone 2, used for Dual Play. * This is available only when using Dual Play.
<b>Changing the Effect of the Pedal (Left Pedal)</b>		
Left Pedal	When you turn on the power, the left pedal functions as a soft pedal (p. 7). You can change the function of the pedal to a variety of other operations. By assigning a function to the pedal, you can instantly change a setting by pressing the pedal while you perform.	
	Soft	The pedal functions as a soft pedal.
	Play/Stop	The pedal has the same function as the [▶/■] button.
	Layer	Pressing the pedal will layer on Tone 2, used for Dual Play. * This is available only when using Dual Play.
Reg. Pedal Shift	You can assign a pedal to successively switch registrations (p. 8). Each time you press the pedal, you will switch to the next registration. * Pedal function settings take priority in the following order: "Reg. Pedal Shift" → "Center/Left Pedal."	
	Off	Pressing the pedal does not change the registration.
	Left Pedal	The soft pedal can be used only for switching registrations. In this case, the function assigned to the soft pedal cannot be used.
	Center Pedal	The sostenuto pedal can be used only for switching registrations. In this case, the function assigned to the sostenuto pedal cannot be used.
<b>MIDI-related settings</b>		
<b>Preventing Doubled Notes When Connected to a Sequencer (Local Control)</b>		
Local Control	When you have a MIDI sequencer connected via USB, set this parameter to Local Off. Since most sequencers have their Thru function turned on, notes you play on the keyboard may be sounded in duplicate, or get dropped. To prevent this, you can enable the "Local Off" setting so that the keyboard and internal sound generator will be disconnected.	
	Off	Local Control is off. The keyboard is disconnected from the internal sound generator. Playing the keyboard will not produce sound.
	On	Local Control is on. The keyboard is connected to the internal sound generator.
<b>MIDI Transmit Channel Settings (MIDI Transmit Ch.)</b>		
MIDI Transmit Ch.	This setting specifies the MIDI channel on which the unit will transmit. This unit will receive all sixteen channels (1–16).	
	Off, 1–16	
<b>Overall operation settings</b>		
<b>Changing the Language Displayed in the Screen (Language)</b>		
Language	You can change the language that is displayed in the screen.	
	English, Japanese	
<b>Adjusting the Brightness of the Display (Display Contrast)</b>		
Display Contrast	You can adjust the brightness of the piano's display.	
	1–10	

Indication	Value	Explanation
Screen Saver	<b>Specifying the Time Until the Operating Panel Is Dimmed (Screen Saver)</b>	
	If no operations are performed for a specific length of time, the operating panel's button LEDs and display are dimmed. You can specify the time until they are dimmed. <b>Off, 30 sec., 1 min., 5 min., 10 min.</b>	
Volume Limit	<b>Specifying a Maximum Volume (Volume Limit)</b>	
	You can specify a maximum volume value. This lets you prevent loud sound from being produced unintentionally. <b>MEMO</b> You can also set the volume limit by holding down the [∞] knob and turning the [±] knob. <b>20, 40, 60, 80, 100</b>	
Speaker Setting <b>LX706 LX705 only</b>	<b>Switching the Tonal Character of the Sound from the Speaker (Speaker Setting)</b>	
Haptic Key Vibration <b>LX708 only</b>	You can switch the tonal character of the sound emitted from the speaker as appropriate for your situation.	
	<b>Adjusting the Haptic Key Vibration (Haptic Key Vibration)</b>	
	When a tone in the "Concert Grand" group is selected, this simulates the way in which the keyboard vibrates when you play an acoustic piano. If headphones are connected, this function turns off. If you want the haptic key vibration characteristic of an acoustic piano to be added even when using headphones, set "Effect When Headphones Plugged" to "Effective"	
	Vibration Level	Off, Small, Standard, Large, Extra Large
Effect When Headphones Plugged	Ineffective, Effective	
Power Off by the Lid	<b>Turning Off the Power When You Close the Keyboard Cover (Power Off by the Lid)</b>	
	You can choose whether the power turns off when you close the keyboard cover.	
	Ineffective	The power does not turn off when you close the keyboard cover. To turn off the power, press the [⏻] button. * If Auto Off is specified, the power automatically turns off when a certain length of time has elapsed after you stop playing or operating the instrument.
Effective	The power turns off when you close the keyboard cover.	
Auto Off	<b>Making the Power Automatically Turn off After a Time (Auto Off)</b>	
	With the factory settings, the unit's power will automatically be switched off 30 minutes after you stop playing or operating the unit. If you don't want the power to turn off automatically, change the "Auto Off" setting to "Off" as follows. <b>Off, 10, 30, 240 (min)</b>	
Auto Memory Backup	<b>Saving Settings Automatically (Auto Memory Backup)</b>	
	You can make settings be saved automatically so that the settings will not change when you turn the power off and on again.	
	Off	Settings are not saved. When you turn the power off and on again, settings will return to their default values.
On	The settings are saved automatically. This is convenient, since you don't need to make the settings each time you turn on the power. For details on the settings that are saved, refer to "Settings that are saved by "Auto Memory Backup"" (p. 28).	
Registration Export	You can save all registrations held in registration memory into a registration set on a USB flash drive. (p. 9)	
Registration Import	Loads a registration set from the USB flash drive into the piano's [Registration] button. (p. 9)	
Piano Setup Export	You can save your own piano settings in a USB flash drive, or load them into the other digital piano. (p. 22)	
Piano Setup Import	* Settings can be loaded only into another piano of the same model.	
Format Media	All files saved in the piano's internal memory or on a USB flash drive (sold separately) can be deleted. (p. 23)	

## Making Various Settings (Function Mode)

Indication	Value	Explanation
Factory Reset		Settings saved in the piano can be returned to their factory-set state. (p. 23)
Version		Displays the version of the unit's system program. If a new system program becomes available, it can be used to update your piano. For details, refer to the following URL. <a href="http://www.roland.com/support/">http://www.roland.com/support/</a> Enter the model name → refer to "Updater and Driver"

### Settings Saved Even If the Power Is Turned Off

This piano remembers the "settings that are saved automatically" even when the power is turned off and then on again. If you set the "Auto Memory Backup" setting, the settings saved by "auto memory backup" are also saved. Other settings return to their default values when you turn the power off and on again.

#### Settings that are saved automatically

This piano automatically saves the following settings. These settings are remembered even if the power is turned off.

Setting	Page
Speaker volume	p. 6
Headphone volume	p. 7
Bluetooth On/Off	p. 24
Bluetooth ID	p. 24
Power Off by the Lid	p. 27
Auto Off	p. 27

#### Settings that are saved by "Auto Memory Backup"

If the "Auto Memory Backup" function (p. 27) is on, the following settings are saved.

Setting	Page
Key Touch	p. 16
Ambience	p. 16
Brilliance	p. 16
Master Tuning	p. 16
Temperament	p. 17
Temperament Key	p. 17
Hammer Response	p. 17
Balance (Split, Dual)	p. 10
Metronome (volume, tone, downbeat)	p. 11
Twin Piano Mode	p. 24
Input/Bluetooth Vol.	p. 25
SMF Play Mode	p. 25
Damper Pedal Part	p. 25
Reg. Pedal Shift	p. 26
MIDI Transmit Ch.	p. 26
Language	p. 26
Display Contrast	p. 26
Screen Saver	p. 27
Volume Limit	p. 27
Speaker Setting	p. 27
Haptic Key Vibration	p. 27

#### Disabling the buttons (Panel Lock)

To prevent settings from being accidentally changed while you perform, you can disable all buttons other than the [⏏] button and the [⏏] knob.

Lock the panel	Hold down the [⏏] button until the screen shows the "🔒" symbol.
Unlock the panel	Hold down the [⏏] button until the "🔒" symbol disappears.

# Troubleshooting

Problem	Items to check	Cause/Action	Page
<b>Problems with the piano's sound</b>			
<b>No sound</b>	Is the volume turned down?	Raise the volume.	p. 6
	Could headphones or an adaptor plug be inserted in the Phones jack?	If headphones or an adaptor plug are inserted in the headphones jack, sound is not output from the speakers.	-
	If you want sound to be produced from headphones or external speakers, is the device connected correctly?		p. 4
	Could the "Local Control" setting be turned "Off"?	In function mode, turn the "Local Control" setting "On."	p. 26
<b>Pitch of the keyboard or song is incorrect</b>	Could you have made Transpose settings?	Press the [Transpose] button to cancel transposition.	p. 11
	Is the Master Tune setting appropriate?	When shipped from the factory, the reference pitch is set to "442.0 Hz." Check the "Master Tuning" setting of the Piano Designer function.	p. 16
	Is the setting for the Temperament correct?	When shipped from the factory, the tuning is set to "Equal temperament." Check the "Temperament" setting of the Piano Designer function.	p. 17
	Is the Single Note Tuning setting appropriate?	Check the Piano Designer function's "Single Note settings."	p. 18
<b>Sounds are heard twice (doubled) when the keyboard is played</b>	Could "Dual Play" be specified, so that two tones are layered?	Press the [Split/Dual] button several times to make it go dark, exiting Dual Play.	p. 10
	Could the piano be connected to an external sequencer?	If you don't want the piano to be played from another sound module, set your music production software's "soft thru" setting to "Off." If the function mode "Local Control" setting is "On," turn the "Local Control" setting "Off."	- p. 26
<b>Reverberation remains even if you defeat the Ambience effect</b>	Even if the Ambience effect is off, the acoustic piano's own resonance remains.	You can also reduce the resonance by lowering the "Cabinet Resonance" value of the Piano Designer function.	p. 18
<b>The sound of the higher notes suddenly changes from a certain key</b>	This simulates the characteristics of an acoustic piano, and is not a malfunction. The sound will change where there is a change in the number of strings per key or a transition from wound strings to unwound strings.		-
<b>When you press a key, the sound of a note you didn't press is also faintly heard</b>	In some cases, a note you play might cause a different note (whose frequency is an integer multiple of the first note) to resonate, producing the sensation that the sound has changed; this is not a malfunction.	Lower the Piano Designer's "Full Scale String Res." value, or turn it off.	p. 18
<b>A buzz or vibration occurs when you play the keyboard</b> <b>LX708 only</b>	This feature simulates the vibration that occurs when you play the keyboard of an acoustic piano; it is not a malfunction.	You can eliminate the keyboard vibration by turning the "Haptic Key Vibration" setting off in function mode.	p. 27
<b>High-pitched ringing is heard</b>	<b>If you don't hear it through headphones:</b> It may be that the piano has malfunctioned. Please contact your dealer or a Roland customer service center. <b>If you also hear it through headphones:</b> To decrease the metallic ringing, adjust the following settings. • Ambience (p. 16) • Full Scale String Res. (p. 18)		-
<b>Low notes sound wrong, or are buzzy</b>	Could the volume be set to maximum?	If the volume is at the maximum, the sound might be distorted depending on how you play the piano. If this occurs, lower the volume.	p. 6
		<b>If you also hear it through headphones:</b> It may be that the piano has malfunctioned. Please contact your dealer or a Roland customer service center. <b>If you don't hear it through headphones:</b> Objects near the piano are resonating because of the high volume of sound coming from the speakers. You can take the following measures to minimize resonances. • Keep the volume down. • Locate the speakers 10–15 cm (4–6 inch) away from walls or other surfaces. • Move away from the objects that are resonating.	-
<b>Noise is sometimes heard when you change the master tuning or temperament while piano sound is being produced</b>		Due to the structure of the sound engine, noise might be heard for concert grand sounds if you change the master tuning or temperament while sound is being produced, but this is not a malfunction.	-
<b>The sound is heard differently depending on the tone settings</b>		When using "Dual play" which layers two tones, or "Split play" which produces different tones in the left-hand and right-hand, the sound might be heard differently depending on the specific combination. For some combinations, the effect is not applied to the left-hand tone or to tone 2, but this is not a malfunction.	-

English

Deutsch

Français

Italiano

Español

Português

Nederlands

## Troubleshooting

Problem	Items to check	Cause/Action	Page
<b>Problems with the pedals</b>			
Unusual sound is heard when you press the pedal	Could the adjuster located under the pedal not be in contact with the floor?	The adjuster may have loosened as you used the pedal. Lower the adjuster so that it contacts the floor. If you are using the piano on carpet, lower the adjuster so that it presses strongly against the floor.	p. 7
Pedal does not work, or is "stuck"	Is the pedal connected correctly?	Check the pedal jack located on the back of the piano.	p. 5
	Could you have disconnected or connected the pedal cord while the power was on?	If you disconnect the pedal cord while the piano is powered-on, the pedal effect might remain applied. Connect or disconnect the pedal cord while the piano is powered off.	-
	Could you have changed the way in which the pedal effect is applied?	If the right pedal part is set to "Right" it applies only to the right-hand tone; if set to "Left," it applies only to the left-hand tone.	p. 25
	Could Twin Piano be turned on?	If Twin Piano is on, the right pedal will affect only the right-hand keyboard zone and the left pedal will affect only the left-hand keyboard zone.	-
	Could you have changed the function of the pedal?	If the function of the sostenuto pedal (center pedal) or the soft pedal (left pedal) have been changed, they will not operate as the sostenuto pedal or the soft pedal. Restore the settings of the "Center Pedal Function" and "Left Pedal Function."	p. 25
<b>Problems with song playback</b>			
Only the sound of a particular instrument in a song does not play	When you press the [Part] button, are there parts (Right, Left, Accom) that are unlit in the screen?	Parts that are not shown in the screen do not sound. Select an unlit part to highlight it so that it produces sound.	p. 12
Song volume is inaudible or too low	Could the Song volume be set too low?	Depending on the data format of the song, raise the "Song Volume SMF" or "Song Volume AUDIO" value.	p. 24
Changing the "Song Volume" does not change the volume.	Could the SMF Play Mode be set to "Internal"?	Set the SMF Play Mode to "External."	p. 25
The selected sound changes when you play back a song	Could the SMF Play Mode be set to "Internal"?	Set the SMF Play Mode to "External."	p. 25
Can't play back a song saved in USB flash drive	Is the file extension ".WAV" or ".MP3" or ".MID"?	This piano can play back three types of file: WAVE format or MP3 format audio files, and MIDI files.	-
Names of songs saved on the USB flash drive do not appear in the screen	Does the file have a ".MID" extension? Could the song name information in the file be blank or consist only of spaces?	Song names can be shown in the screen only for files that have a ".MID" extension. If the song name information in the file is blank or consists only of spaces, the song name is not shown in the piano screen.	-
<b>Problems with recording</b>			
Can't record	When you press the [Part] button, is the part to be recorded blinking in the screen?	Select the part in the screen that you want to record, so that it blinks.	p. 14
Can't record audio	Is a USB flash drive connected to the USB Memory port?	Audio recording cannot be performed unless a USB flash drive is connected.	-
Volume differs between recording and playback	Could the song volume be set too low?	Depending on the data format of the song, raise the "Song Volume SMF" or "Song Volume AUDIO" value.	p. 24
The tonal character of the piano changes when you record	Could you be recording with a tone that you created in Piano Designer?	Some of the Piano Designer settings might not be reproduced when you play back a song.	-
	Could you be playing back a song that you audio-recorded to an USB flash drive?	If you want to record with the same tonal character as when you play the keyboard, record your performance as SMF.	-
<b>Other problems</b>			
Even though you're using headphones to mute the sound, a thumping sound is heard when you play the keyboard	The keyboard of this piano is designed to simulate the mechanism of an acoustic piano. Even on an acoustic piano, a thumping sound is actually being produced when you press a key. Such sounds do not indicate a malfunction.		-
Marks appear on the cloth portion of the piano	If your hands or feet, or other objects, touch the cloth portion located around the music rest or near your feet, the cloth might be wrinkled, causing it to appear marred or discolored, but this does not affect the performance of the unit.		-

Problem	Items to check	Cause/Action	Page
Power turns off on its own	Could you have made settings so that the power automatically turns off when the piano has not been used for a time?	If you don't need the power to turn off automatically, turn the Auto Off setting "Off."	p. 27
Power turns on unexpectedly	This unit powers-on when you open the keyboard cover, and powers-off when you close the keyboard cover.		p. 6
Power does not turn on	Is the AC adaptor connected correctly?		p. 5
The buttons of the operating panel do not work	Could you have enabled the "Panel Lock" setting to prevent inadvertent operation?	Disengage the "Panel Lock" setting.	p. 28
The volume level of the unit connected to Input jack is too low	Could the volume of the connected device be turned down?		-
	Could "Input/Bluetooth Vol." be lowered?		p. 25

English

Deutsch

Français

Italiano

Español

Português

Nederlands

## Error Messages



Indication	Meaning
Error 2	An error occurred during writing. The USB flash drive may be corrupted. Insert other USB flash drive and try again. Alternatively, you can initialize the USB flash drive ("Initializing the Memory (Format Media)" (p. 23)).
	The internal memory might be damaged. Format the internal memory ("Initializing the Memory (Format Media)" (p. 23)).
Error 10	No USB flash drive is inserted. Insert the USB flash drive and try again.
	The internal memory might be damaged. Format the internal memory ("Initializing the Memory (Format Media)" (p. 23)).
Error 11	There is not sufficient free memory in the save destination.
	Either insert other USB flash drive or delete unneeded files and try again.
Error 14	An error occurred during reading. The USB flash drive may be corrupted. Insert other USB flash drive and try again. Alternatively, you can initialize the USB flash drive ("Initializing the Memory (Format Media)" (p. 23)).
	The internal memory might be damaged. Format the internal memory ("Initializing the Memory (Format Media)" (p. 23)).
Error 15	The file is unreadable. The data format is not compatible with the unit.
Error 18	This audio format is not supported.
	Use an WAV format (44.1 kHz, 16-bit linear) or MP3 format audio file.
Error 30	Internal memory capacity of the unit is full.
Error 40	The unit cannot deal with the excessive MIDI data sent from the external MIDI device.
	Reduce the amount of MIDI data sent to the unit.
Error 43	A MIDI transmission error has occurred. Check the connected MIDI device.
Error 51	There may be a problem with the system. Repeat the procedure from the beginning. If it is not solved after you have tried several times, contact the Roland service center.
Error 65	The USB Memory port was subjected to excessive current. Make sure that there is no problem with the USB flash drive, then turn the power off, then on again.






# USING THE UNIT SAFELY

## INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

### About ⚠ WARNING and ⚠ CAUTION Notices

 <b>WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 <b>CAUTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

### About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⏻ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

## ALWAYS OBSERVE THE FOLLOWING

### WARNING

#### Concerning the Auto Off function

The power to this unit will be turned off automatically after a predetermined amount of time has passed since it was last used for playing music, or its buttons or controls were operated (Auto Off function). If you do not want the power to be turned off automatically, disengage the Auto Off function (p. 27).



#### Use only the supplied AC adaptor and the correct voltage

Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock.



#### Use only the supplied power cord

Use only the attached power cord. Also, the supplied power cord must not be used with any other device.



### CAUTION

#### Cautions when moving this unit

If you need to move the instrument, take note of the precautions listed below. At least two persons are required to safely lift and move the unit. It should be handled carefully, all the while keeping it level. Make sure to have a firm grip, to protect yourself from injury and the instrument from damage.



- Check to make sure the screws securing the unit to the stand have not become loose. Fasten them again securely whenever you notice any loosening (LX706 and LX705 only).
- Disconnect the power cord.
- Disconnect all cords coming from external devices.
- Raise the adjusters on the stand (p. 7).
- Close the keyboard cover.
- Close the top lid (LX708 only).
- Fold down the music rest.
- Remove the headphone hook (LX706 and LX705 only).

#### Take care so as not to get fingers pinched

When handling the following moving parts, take care so as not to get fingers, toes, etc., pinched. Whenever a child uses the unit, an adult should be on hand to provide supervision and guidance.



- Pedals (p. 7).
- Keyboard Cover (p. 6)
- Music Rest (p. 6)
- Top lid (LX708 only) (p. 6)

#### Keep small items out of the reach of children

To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.



- Removable Parts (LX708 and LX706 only)  
Thumbscrews (rear panel of piano)



# IMPORTANT NOTES

## Placement

- Do not allow lighting devices that normally are used while their light source is very close to the unit (such as a piano light), or powerful spotlights to shine upon the same area of the unit for extended periods of time. Excessive heat can deform or discolor the unit.
- Do not allow objects to remain on top of the keyboard. This can be the cause of malfunction, such as keys ceasing to produce sound.

## Maintenance (Other than Mirror Finish)

- To clean the unit, use a dry, soft cloth; or one that is slightly dampened. Try to wipe the entire surface using an equal amount of strength, moving the cloth along with the grain of the wood. Rubbing too hard in the same area can damage the finish.
- The pedals of this unit are made of brass. Brass eventually darkens as the result of the natural oxidization process. If the brass becomes tarnished, polish it using commercially available metal polisher.

## Care of the Keyboard

- Do not write on the keyboard with any pen or other implement, and do not stamp or place any marking on the instrument. Ink will seep into the surface lines and become unremovable.
- Do not affix stickers on the keyboard. You may be unable to remove stickers that use strong adhesives, and the adhesive may cause discoloration.
- To remove stubborn dirt, use a commercially available keyboard cleaner that does not contain abrasives. Start by wiping lightly. If the dirt does not come off, wipe using gradually increasing amounts of pressure while taking care not to scratch the keys.

## Concerning the Care of the Unit (Mirror Finish)

- The surface of this unit has been polished so as to create a high-gloss, mirror-like finish. Since this beautiful finish is as delicate as that of the highest quality, wood-crafted furniture, it needs to be cared for at regular intervals. Please make sure to observe the following when caring for the unit.
  - For routine care, gently clean the surface using a soft cloth or a piano-use feather duster. You must avoid applying any force, since even the tiniest particles of sand or grit can produce scratches if you wipe too hard.
  - If the finish loses its luster, use a soft cloth dampened with some polishing liquid to evenly wipe the surface of the unit.
  - Avoid using detergents or other cleaners, as they can cause the surface finish to deteriorate. This may lead to the formation of cracks or other imperfections. Also, do not use chemically-enhanced cleaning cloths.

- Precautions concerning the use of polishing agents
  - Refer to the instructions that came with the polishing agent for instructions on its proper use.
  - Use only polishing agents that are designed specifically for use on the mirror finishes of pianos. By using any other product, you risk causing scratches, deformation, discoloration, etc. To purchase an appropriate product, please consult the nearest musical instrument store.
  - Use the product only on the portions of this unit that have a mirror-like finish, and using an even touch, apply it equally over the entire surface. If you apply more force in one place over another, you risk losing some of the luster of the finish.
  - Store in a location that is out of the reach of small children. If accidentally ingested, induce vomiting immediately. Then, see a doctor to obtain a diagnosis.

## Repairs and Data

- Before sending the unit away for repairs, be sure to make a backup of the data stored within it; or you may prefer to write down the needed information. Although we will do our utmost to preserve the data stored in your unit when we carry out repairs, in some cases, such as when the memory section is physically damaged, restoration of the stored content may be impossible. Roland assumes no liability concerning the restoration of any stored content that has been lost.

## Additional Precautions

- Any data stored within the unit can be lost as the result of equipment failure, incorrect operation, etc. To protect yourself against the irretrievable loss of data, try to make a habit of creating regular backups of the data you've stored in the unit.
- Roland assumes no liability concerning the restoration of any stored content that has been lost.
- Never strike or apply strong pressure to the display.
- The sound of keys being struck and vibrations produced by playing an instrument can be transmitted through a floor or wall to an unexpected extent. Please take care not to cause annoyance to others nearby.
- Do not apply undue force to the music rest while it is in use.
- Do not use connection cables that contain a built-in resistor.

## Using External Memories

- Please observe the following precautions when handling external memory devices. Also, make sure to carefully observe all the precautions that were supplied with the external memory device.
  - Do not remove the device while reading/writing is in progress.
  - To prevent damage from static electricity, discharge all static electricity from your person before handling the device.

## Caution Regarding Radio Frequency Emissions

- The following actions may subject you to penalty of law.
  - Disassembling or modifying this device.
  - Removing the certification label affixed to the back of this device.

## Intellectual Property Right

- It is forbidden by law to make an audio recording, video recording, copy or revision of a third party's copyrighted work (musical work, video work, broadcast, live performance, or other work), whether in whole or in part, and distribute, sell, lease, perform or broadcast it without the permission of the copyright owner.
- Do not use this product for purposes that could infringe on a copyright held by a third party. We assume no responsibility whatsoever with regard to any infringements of third-party copyrights arising through your use of this product.
- The copyright of content in this product (the sound waveform data, style data, accompaniment patterns, phrase data, audio loops and image data) is reserved by Roland Corporation.
- Purchasers of this product are permitted to utilize said content (except song data such as Demo Songs) for the creating, performing, recording and distributing original musical works.
- Purchasers of this product are NOT permitted to extract said content in original or modified form, for the purpose of distributing recorded medium of said content or making them available on a computer network.
- This product contains eParts integrated software platform of eSOL Co.,Ltd. eParts is a trademark of eSOL Co., Ltd. in Japan.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Roland is under license.
- This Product uses the Source Code of µT-Kernel under T-License 2.0 granted by the T-Engine Forum ([www.tron.org](http://www.tron.org)).
- This product is using the Jansson (<http://www.digip.org/jansson/>) source code. Copyright © 2009-2016 Petri Lehtinen <[petri@digip.org](mailto:petri@digip.org)> Released under the MIT license <http://opensource.org/licenses/mit-license.php>
- Roland, SuperNATURAL, Pure Acoustic, Piano Every Day are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

# Tone List

## Piano

No.	Tone Name
1	European Grand
2	European v2
3	American Grand
4	American v2

## E. Piano

No.	Tone Name
1	1976SuitCase
2	Tremolo EP
3	Pop EP
4	Vintage EP
5	FM E.Piano
6	EP Belle
7	60's EP
8	Clav.
9	Stage Phaser
10	70's EP
11	E.Grand

## Strings

No.	Tone Name
1	SymphonicStr1
2	Epic Strings
3	Rich Strings
4	Orchestra Str
5	Orchestra
6	Chamber Winds
7	Harp
8	Violin
9	Velo Strings
10	Flute
11	Cello
12	OrchestraBrs
13	Pizzicato Str
14	SymphonicStr2
15	Soft Pad
16	Magical Piano
17	Jazz Scat
18	A.Bass+Cymb1

## Other

No.	Tone Name
<b>Organ</b>	
1	Pipe Organ
2	Nason Flt 8'
3	Combo Jz.Org
4	Ballad Organ
5	ChurchOrgan1
6	ChurchOrgan2
7	Gospel Spin
8	Full Stops

No.	Tone Name
9	Mellow Bars
10	Light Organ
11	Lower Organ
12	60's Organ
<b>Upright</b>	
13	Upright Piano
14	Mellow Upright
15	Bright Upright
16	Rock Piano
17	Ragtime Piano
<b>Classical</b>	
18	Fortepiano
19	Mellow Forte
20	Bright Forte
21	Harpsichord
22	Harpsi 8'+4'
<b>Do Re Mi</b>	
23	Do Re Mi 1#
24	Do Re Mi 1b
25	Do Re Mi 2#
26	Do Re Mi 2b
<b>Drums</b>	
27	STANDARD Set
28	ROOM Set
29	POWER Set
30	ELEC.Set
31	ANALOG Set
32	JAZZ Set
33	BRUSH Set
34	ORCH.Set
35	SFX Set
<b>GM2</b>	
36	Piano 1
37	Piano 1w
38	Piano 1d
39	Piano 2
40	Piano 2w
41	Piano 3
42	Piano 3w
43	Honky-tonk
44	Honky-tonk w
45	E.Piano 1
46	Detuned EP 1
47	Vintage EP
48	60's E.Piano
49	E.Piano 2
50	Detuned EP 2
51	St.FM EP
52	EP Legend
53	EP Phaser
54	Harpsi.
55	Coupled Hps.
56	Harpsi.w
57	Harpsi.o
58	Clav.
59	Pulse Clav.

No.	Tone Name
60	Celesta
61	Glockenspiel
62	Music Box
63	Vibraphone
64	Vibraphone w
65	Marimba
66	Marimba w
67	Xylophone
68	TubularBells
69	Church Bell
70	Carillon
71	Santur
72	Organ 1
73	TremoloOrgan
74	60's Organ
75	Organ 2
76	Perc.Organ 1
77	Chorus Organ
78	Perc.Organ 2
79	Rock Organ
80	Church Org.1
81	Church Org.2
82	Church Org.3
83	Reed Organ
84	Puff Organ
85	Accordion 1
86	Accordion 2
87	Harmonica
88	Bandoneon
89	Nylon-str.Gt
90	Ukulele
91	Nylon Gt o
92	Nylon Gt 2
93	Steel-str.Gt
94	12-str.Gt
95	Mandolin
96	Steel+Body
97	Jazz Guitar
98	Hawaiian Gt
99	Clean Guitar
100	Chorus Gt 1
101	Mid Tone Gt
102	Muted Guitar
103	Funk Guitar1
104	Funk Guitar2
105	Chorus Gt 2
106	Overdrive Gt
107	Guitar Pinch
108	DistortionGt
109	Gt Feedback1
110	Dist.Rhy Gt
111	Gt Harmonics
112	Gt Feedback2
113	AcousticBass
114	FingeredBass
115	Finger Slap

No.	Tone Name
116	Picked Bass
117	FretlessBass
118	Slap Bass 1
119	Slap Bass 2
120	Synth Bass 1
121	WarmSyn.Bass
122	Synth Bass 3
123	Clav.Bass
124	Hammer Bass
125	Synth Bass 2
126	Synth Bass 4
127	RubberSyn.Bs
128	Attack Pulse
129	Violin
130	Slow Violin
131	Viola
132	Cello
133	Contrabass
134	Tremolo Str.
135	PizzicatoStr
136	Harp
137	Yang Qin
138	Timpani
139	Strings
140	Orchestra
141	60's Strings
142	Slow Strings
143	Syn.Strings1
144	Syn.Strings3
145	Syn.Strings2
146	Choir 1
147	Choir 2
148	Voice
149	Humming
150	Synth Voice
151	Analog Voice
152	OrchestraHit
153	Bass Hit
154	6th Hit
155	Euro Hit
156	Trumpet
157	Dark Trumpet
158	Trombone 1
159	Trombone 2
160	Bright Tb
161	Tuba
162	MuteTrumpet1
163	MuteTrumpet2
164	French Horn1
165	French Horn2
166	Brass 1
167	Brass 2
168	Synth Brass1
169	Synth Brass3
170	AnalogBrass1
171	Jump Brass

## Tone List

---

No.	Tone Name
172	Synth Brass2
173	Synth Brass4
174	AnalogBrass2
175	Soprano Sax
176	Alto Sax
177	Tenor Sax
178	Baritone Sax
179	Oboe
180	English Horn
181	Bassoon
182	Clarinet
183	Piccolo
184	Flute
185	Recorder
186	Pan Flute
187	Bottle Blow
188	Shakuhachi
189	Whistle
190	Ocarina
191	Square Lead1
192	Square Lead2
193	Sine Lead
194	Saw Lead 1
195	Saw Lead 2
196	Doctor Solo
197	Natural Lead
198	SequencedSaw
199	Syn.Calliope
200	Chiffer Lead
201	Charang
202	Wire Lead
203	Solo Vox
204	5th Saw Lead
205	Bass+Lead
206	Delayed Lead
207	Fantasia
208	Warm Pad
209	Sine Pad
210	Polysynth
211	Space Voice
212	Itopia
213	Bowed Glass
214	Metallic Pad
215	Halo Pad
216	Sweep Pad
217	Ice Rain
218	Soundtrack
219	Crystal
220	Synth Mallet
221	Atmosphere
222	Brightness
223	Goblins
224	Echo Drops
225	Echo Bell
226	Echo Pan
227	Star Theme

No.	Tone Name
228	Sitar 1
229	Sitar 2
230	Banjo
231	Shamisen
232	Koto
233	Taisho Koto
234	Kalimba
235	Bagpipe
236	Fiddle
237	Shanai
238	Tinkle Bell
239	Agogo
240	Steel Drums
241	Woodblock
242	Castanets
243	Taiko
244	Concert BD
245	Melodic Tom1
246	Melodic Tom2
247	Synth Drum
248	TR-808 Tom
249	Elec.Perc.
250	Reverse Cym.
251	Gt FretNoise
252	Gt Cut Noise
253	BsStringSlap
254	Breath Noise
255	Fl.Key Click
256	Seashore
257	Rain
258	Thunder
259	Wind
260	Stream
261	Bubble
262	Bird 1
263	Dog
264	Horse Gallop
265	Bird 2
266	Telephone 1
267	Telephone 2
268	DoorCreaking
269	Door
270	Scratch
271	Wind Chimes
272	Helicopter
273	Car Engine
274	Car Stop
275	Car Pass
276	Car Crash
277	Siren
278	Train
279	Jetplane
280	Starship
281	Burst Noise
282	Applause
283	Laughing

No.	Tone Name
284	Screaming
285	Punch
286	Heart Beat
287	Footsteps
288	Gun Shot
289	Machine Gun
290	Laser Gun
291	Explosion

# Internal Song List

No.	Song Name	Composer
<b>Listening</b>		
1	Nocturne, op.9-2	Fryderyk Franciszek Chopin
2	Jeux d'eau	Maurice Ravel
3	Amazing Grace	Hymn
4	Für Elise (Jazz Arrangement)	Ludwig van Beethoven
5	Sonate für Klavier Nr.14 1	Ludwig van Beethoven
6	Sonate für Klavier Nr.14 2	Ludwig van Beethoven
7	Sonate für Klavier Nr.14 3	Ludwig van Beethoven
8	Widmung S.566 R.253	“Robert Alexander Schumann Arranged by Franz Liszt”
9	Étude, op.10-12	Fryderyk Franciszek Chopin
10	Barcarolle	Fryderyk Franciszek Chopin
11	Zhavoronok	“Mikhail Ivanovich Glinka Arranged by Mily Alexeyevich Balakirev”
12	Sonate für Klavier Nr.23 1	Ludwig van Beethoven
13	Sonate für Klavier Nr.23 2	Ludwig van Beethoven
14	Sonate für Klavier Nr.23 3	Ludwig van Beethoven
15	Valse, op.34-1	Fryderyk Franciszek Chopin
16	Polonaise op.53	Fryderyk Franciszek Chopin
17	Nocturne No.20	Fryderyk Franciszek Chopin
18	Die Forelle	“Franz Peter Schubert Arranged by Franz Liszt”
19	Reflets dans l'Eau	Claude Achille Debussy
20	La Fille aux Cheveux de Lin	Claude Achille Debussy
21	La Campanella	Franz Liszt
22	Scherzo No.2	Fryderyk Franciszek Chopin
<b>Ensemble</b>		
*Songs corresponding to the included collection of scores, “Roland Piano Masterpieces.”		
1	Piano Concerto No.1*	Peter Ilyich Tchaikovsky
2	Piano Concerto No.2*	Sergei Rachmaninoff
3	Canon (Jazz Arrangement)*	Johann Pachelbel
4	Sicilienne (Jazz Arrangement)*	Gabriel Fauré
5	Berceuse from Dolly Suite	Gabriel Fauré
6	Le jardin féerique from Ma mère l'Oye	Maurice Ravel
7	Le Quattro Stagioni “La Primavera”*	Antonio Vivaldi
8	Marche Militaire Nr.1*	Franz Peter Schubert
9	Waltz from the Sleeping Beauty*	Peter Ilyich Tchaikovsky
10	L'Apprenti sorcier*	Paul Dukas
11	Salut d'Amour	Edward Elgar
12	Pavane pour une infante défunte	Maurice Ravel
13	Menuett G Dur BWV Anh.114	Johann Sebastian Bach
14	Präludium C Dur BWV846	Johann Sebastian Bach
15	Türkischer Marsch	Wolfgang Amadeus Mozart
16	Für Elise	Ludwig van Beethoven
17	Türkischer Marsch	Ludwig van Beethoven
18	Auf Flügeln des Gesanges	Felix Mendelssohn

No.	Song Name	Composer
19	Étude, op.10-3	Fryderyk Franciszek Chopin
20	Valse, op.64-1	Fryderyk Franciszek Chopin
21	Fantaisie-Impromptu	Fryderyk Franciszek Chopin
22	Träumerei	Robert Alexander Schumann
23	Dolly's Dreaming Awakening	Theodor Oesten
24	Brautchor	Wilhelm Richard Wagner
25	Liebesträume Nr.3	Franz Liszt
26	Ungarische Tänze Nr.5	Johannes Brahms
27	Clair de Lune	Claude Achille Debussy
28	1ère Arabesque	Claude Achille Debussy
29	Golliwog's Cakewalk	Claude Achille Debussy
30	Je te veux	Erik Satie
<b>Entertainment</b>		
*Songs corresponding to the included collection of scores, “Roland Piano Masterpieces.”		
1	Polovtsian Dances	Alexander Borodin
2	Ombra mai fù	George Frideric Handel
3	Lascia ch'io pianga	George Frideric Handel
4	Twinkle Twinkle Little Star	French Folk Song
5	Mary Had a Little Lamb	Traditional
6	Bear Song	American Folk Song
7	Ich Bin Ein Musikante	German Folk Song
8	Grand Father's Clock	Henry Work
9	Jingle Bells	James Pierpont
10	We Wish You a Merry Christmas	Carol
11	Silent Night	Franz Gruber
12	Amazing Grace	Hymn
13	Lavender's Blue	Traditional
14	Aura Lee	George R. Poulton
15	Auld Lang Syne	Traditional
16	Greensleeves	Traditional
17	Maple Leaf Rag	Scott Joplin
18	The Entertainer	Scott Joplin
19	When The Saints Go Marching In	Traditional
20	Little Brown Jug	Joseph Winner
<b>Do Re Mi Lesson</b>		
*Songs corresponding to the included collection of scores, “Roland Piano Masterpieces.”		
1–15	Training No.1 - 15	Roland Corporation
16	Twinkle Twinkle Little Star	French Folk Song
17	Summ,Summ,Summ	Traditional
18	Frog Song	German Folk Song
19	The Cuckoo	Traditional
20	Oh! Susanna	Stephen Foster
21	Let's Clap Hands	Traditional
22	Das klinget so herrlich	Wolfgang Amadeus Mozart
23	Wiegenlied	Johannes Brahms
24	Les Patineurs	Émile Waldteufel
25	Minuet	Johann Sebastian Bach
26	Old Folks At Home	Stephen Foster
27	Deck the Halls	Carol
28	Danny Boy	Irish Song
29	Korobeiniki	Russian Folk Song
30	Sakura Sakura	Japanese Folk Song

## Internal Song List

---

No.	Song Name	Composer
<b>Scale</b>		
*Songs corresponding to the included collection of scores, "Roland Piano Masterpieces."		
1-36	Major Scales, Minor Scales	-
<b>Hanon</b>		
1-20	1-20	Charles-Louis Hanon
<b>Beyer</b>		
1-106	1-106	Ferdinand Beyer
<b>Burgmüller</b>		
1	Openness	Johann Friedrich Franz Burgmüller
2	Arabesque	
3	Pastoral	
4	A Small Gathering	
5	Innocence	
6	Progress	
7	The Clear Stream	
8	Gracefulness	
9	The Hunt	
10	Tender Flower	
11	The Young Shepherdess	
12	Farewell	
13	Consolation	
14	Austrian Dance	
15	Ballad	
16	Sighing	
17	The Chatterbox	
18	Restlessness	
19	Ave Maria	
20	Tarantella	
21	Angelic Harmony	
22	Gondola Song	
23	The Return	
24	The Swallow	
25	The Knight Errant	
<b>Czerny 100</b>		
1-100	1-100	Carl Czerny

- \* All rights reserved. Unauthorized use of this material for purposes other than private, personal enjoyment is a violation of applicable laws.
- \* Songs marked by an asterisk (\*) are arranged by Roland Corporation. The copyrights to these songs are owned by the Roland Corporation.
- \* Songs in Listening category are piano solos. They have no accompaniment.
- \* "Nocturne, op.9-2", "Jeux d'eau" and "Sonate für Klavier Nr.14 1-3" are played by Yusuke Kikuchi
- \* "Jeux d'eau" and "Für Elise (Jazz Arrangement)" are played by Shinji Akita
- \* The performance data for the tone demos and the internal songs is not transmitted from the USB Computer port or via Bluetooth (MIDI).
- \* If the SMF Play Mode is set to "Internal," there will be some parts whose volume does not change when you adjust the Song Volume SMF value. If the SMF Play Mode is set to "External," the volume of all parts will change.

 **Roland**